SENA

30K

MOTORCYCLE BLUETOOTH COMMUNICATION SYSTEM WITH MESH INTERCOM™



MENU

HD SPEAKERS

Version: 3.1.0

CLICK ANY SECTION TO BEGIN

ABOUT THE HEADSET

INSTALLING THE HEADSET

GETTING STARTED

PAIRING WITH DEVICES

MOBILE PHONE USAGE

STEREO MUSIC

MESH INTERCOM

INTERCOM SETUP

AUDIO MULTITASKING

USING THE FM RADIO

AMBIENT MODE

VOICE COMMAND

GENERAL SETTINGS

REMOTE CONTROL

TROUBLE-SHOOTING


LEGEND:



Tap button/Jog Dial the specified number of times




Press and Hold button/ Jog Dial for the specified amount of time

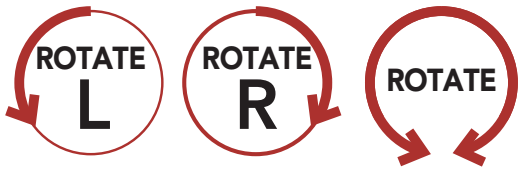

Rotate Jog Dial clockwise (right) or counterclockwise (left).




Rotate while Pressing Jog Dial clockwise (right) or counterclockwise (left).



"Hello"

Audible prompt from the headset

TABLE OF CONTENTS

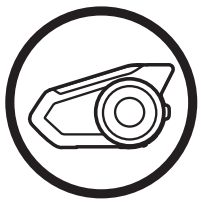

1. ABOUT THE MOTORCYCLE BLUETOOTH COMMUNICATION SYSTEM WITH MESH INTERCOM™ 9

1.1 Product Details 9
- 1.1.1 Headset Main Unit 9
- 1.1.2 Universal Clamp Kit 9

1.2 Package Contents 10



2. INSTALLING THE HEADSET ON YOUR HELMET 12


2.1 Helmet Installation 12

2.2 Using the Glued Surface Mounting Adapter 15

2.3 Switching the Microphone 17
- 2.3.1 Wired Boom Microphone 18
- 2.3.2 Wired Microphone 18

2.4 Earbuds 19

2.5 External Mesh Intercom Antenna 19

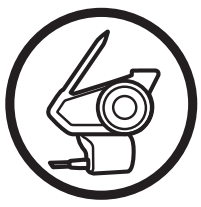

3. GETTING STARTED 20

3.1 Button Functions 20

3.2 Downloadable Sena Software 21
- 3.2.1 Sena 30K Utility App 21
- 3.2.2 Sena Device Manager 21

3.3 Powering On and Off 22

3.4 Charging 23

3.5 Checking the Battery Level 24

3.6 Volume Adjustment 25

3.7 Configuration Menu 26

4. PAIRING THE HEADSET WITH OTHER BLUETOOTH DEVICES 29

4.1 Mobile Phone 30
- 4.1.1 Pairing When the 30K is Turned Off 30
- 4.1.2 Pairing When the 30K is Turned On 31

4.2 Additional Mobile Phones, MP3 Player or Sena SR10 Two-Way Radio Adapter 32

4.3 Advanced Selective Pairing: Hands-Free or A2DP Stereo 33
- 4.3.1 Phone Selective Pairing - Hands-Free Profile 33
- 4.3.2 Media Selective Pairing - A2DP Profile 34

4.4 GPS Pairing 36

5. MOBILE PHONE USAGE 38

5.1 Making and Answering Calls 38

5.2 Speed Dialing 39
- 5.2.1 Assigning Speed Dial Presets 39
- 5.2.2 Using Speed Dial Presets 39

5.3 VOX Phone (Default: Enable) 41

6. STEREO MUSIC 42

6.1 Playing Music with Bluetooth Devices 42

6.2 Playing Music with non-Bluetooth Devices 43

6.3 Music Sharing 44

6.4 Audio Equalizer (Default: Off) 46

6.5 Smart Volume Control (Default: Disable) 46

TABLE OF CONTENTS CONTINUED

7. MESH INTERCOM 47

7.1 What is Mesh Intercom? 47
- 7.1.1 Open Mesh 48
- 7.1.2 Group Mesh 49

7.2 Starting Mesh Intercom 50

7.3 Using the Mesh in Open Mesh 50
- 7.3.1 Channel Setting (Default: channel 1) 51

7.4 Using Mesh in Group Mesh 53
- 7.4.1 Creating a Group Mesh 53
- 7.4.2 Joining an Existing Group Mesh 54

7.5 Reset Mesh 56

7.6 Toggling Open Mesh/Group Mesh 56

7.7 Enable/Disable Mic (Default: Enable) 57

8. BLUETOOTH INTERCOM SETUP 58

8.1 Intercom Pairing 58

8.2 Two-Way Intercom 61

8.3 Multi-Way Intercom 62
- 8.3.1 Starting a Three-Way Intercom Conference 62
- 8.3.2 Starting a Four-Way Intercom Conference 64
- 8.3.3 Ending Multi-Way Intercom 65

8.4 Three-Way Conference Phone Call with Intercom Users 65

8.5 Group Intercom 67

8.6 Mesh Intercom Conference with Bluetooth Intercom Participant 68

8.7 Universal Intercom 70

8.8 VOX Intercom (Default: Disable) 73

8.9 Intercom VOX Sensitivity (Default: 3) 74

8.10 HD Intercom (Default: Enable) 74

8.11 Advanced Noise Control™ (Default: Enable) 74

9. AUDIO MULTITASKING 75

9.1 Audio Multitasking Settings 75
9.2 Intercom-Audio Overlay Sensitivity (Default: 3) 76
9.3 Audio Overlay Volume Management (Default: Disable) 76

10. USING THE FM RADIO 77

10.1 FM Radio On/Off 77
10.2 Seek and Save Radio Stations 78
10.3 Scan and Save Radio Stations 80
10.4 Temporary Station Preset 81
10.5 Navigating Preset Stations 82
10.6 Region Selection 82
10.7 Radio Data System (RDS) Alternative Frequency (AF) Setting (Default: Disable) 83
10.8 FM Station Guide (Default: Enable) 83

11. AMBIENT MODE 84

12. VOICE COMMAND 85

12.1 Voice Command Setting (Default: Enable) 87

13. GENERAL SETTINGS 88

13.1 Function Priority 88
13.2 Firmware Upgrades 88
13.3 Voice Prompts (Default: Enable) 89
13.4 Sidetone (Default: Disable) 89
13.5 Delete All Bluetooth Pairing Information 90

TABLE OF CONTENTS CONTINUED



14. REMOTE CONTROL 91

14.1 Pairing with the Remote Control 91



15. TROUBLESHOOTING 93

15.1 Fault Reset 93

15.2 Factory Reset 94

1. ABOUT THE MOTORCYCLE BLUETOOTH COMMUNICATION SYSTEM WITH MESH INTERCOM™

1.1 Product Details


Product Details

Package Contents

1.1.1 Headset Main Unit










1.1.2 Universal Clamp Kit

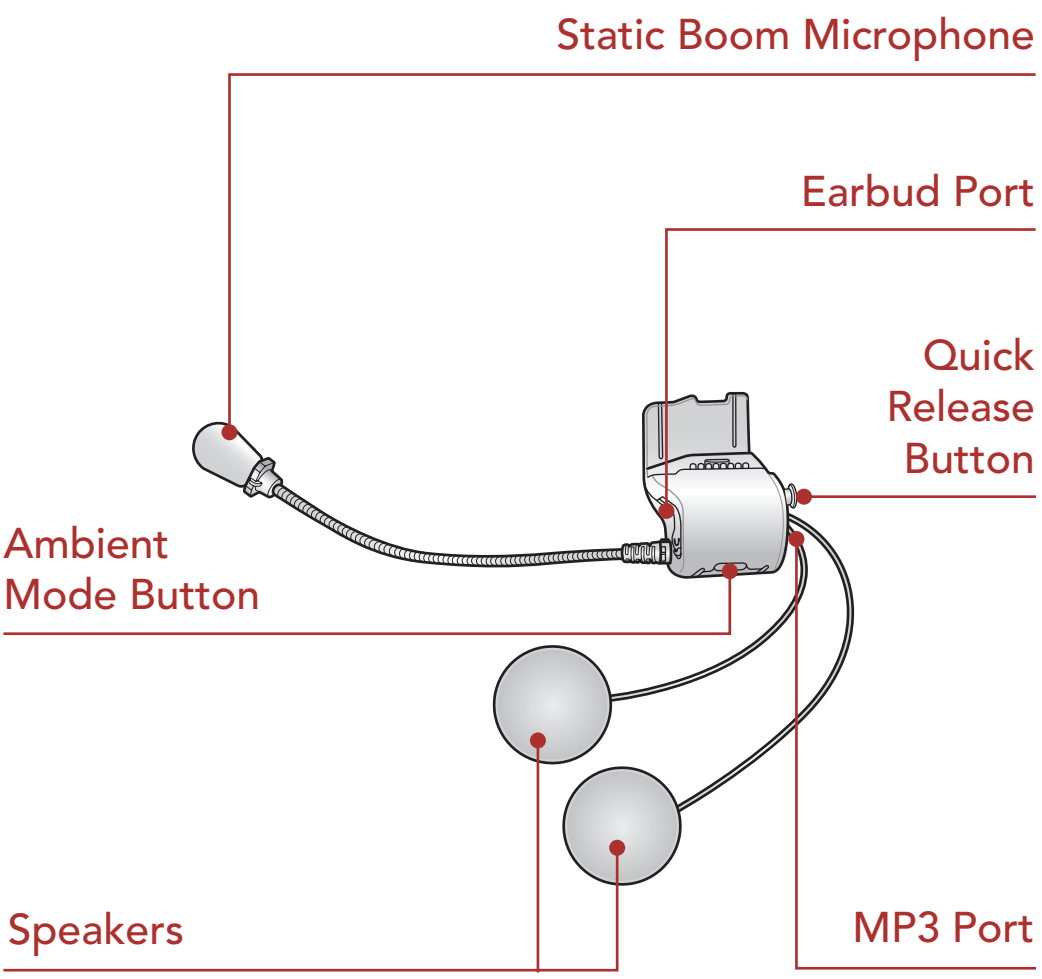

1. ABOUT THE MOTORCYCLE BLUETOOTH COMMUNICATION SYSTEM WITH MESH INTERCOM™









1.2 Package Contents

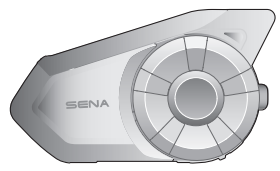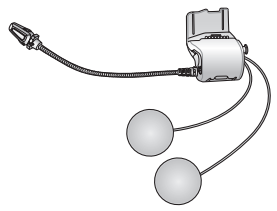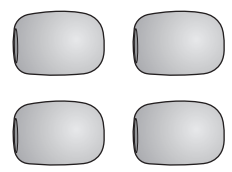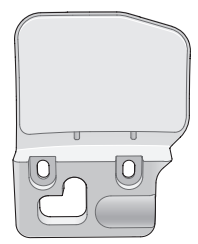• 30K Headset Main Unit	
• Universal Helmet Clamp	
• Wired Boom Microphone	
• Wired Microphone	
• Hook and Loop Fastener for Boom Microphone	
• Hook and Loop Fastener for Wired Microphone	
• Microphone Sponges	
• Glued Surface Mounting Adapter	

1. ABOUT THE MOTORCYCLE BLUETOOTH COMMUNICATION SYSTEM WITH MESH INTERCOM™

Product Details

Package Contents

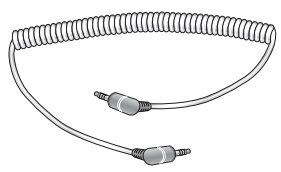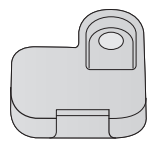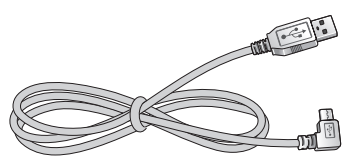• Speaker Pads	
• Hook and Loop Fasteners for Speakers	
• Boom Microphone Holder	
• Hook and Loop Fastener for Holder	
• 2.5 to 3.5 mm Audio Cable	
• Rubber Pads	
• Allen Wrench	
• Speaker Port Cover	
• USB Power & Data Cable (Micro USB Type)	

2. INSTALLING THE HEADSET ON YOUR HELMET

Helmet Installation

Using the Glued Surface Mounting Adapter

Switching the Microphone


Earbuds

External Mesh Intercom Antenna


2.1 Helmet Installation

To securely install the headset on the helmet, please follow this procedure.

1. Insert the back plate of the clamp unit between the internal padding and the external shell of the helmet, and tighten the two screws.

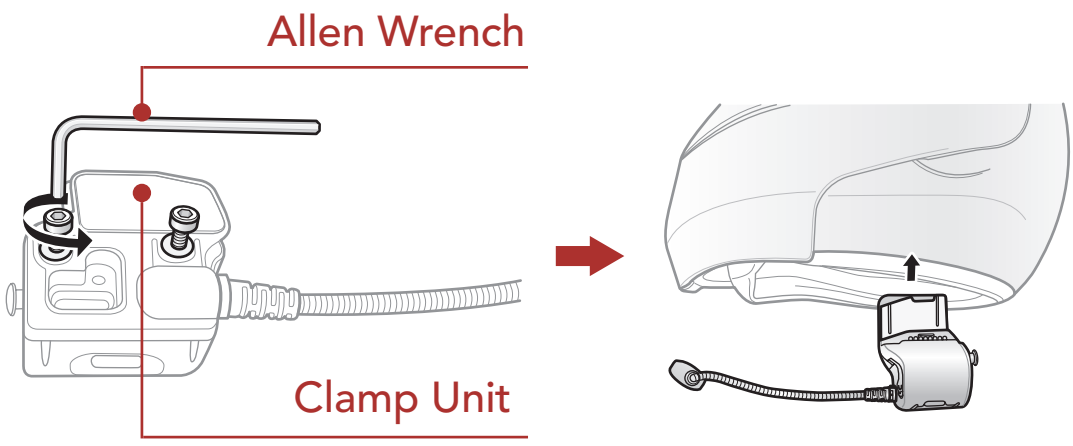

Note: Depending on the size and shape of your helmet, you may need to change the thickness of the rubber pad between the clamp plates using the two extra rubber pads in the box. To increase the overall thickness, attach the thinner one to the original rubber pad or replace the original rubber pad with the thicker one.

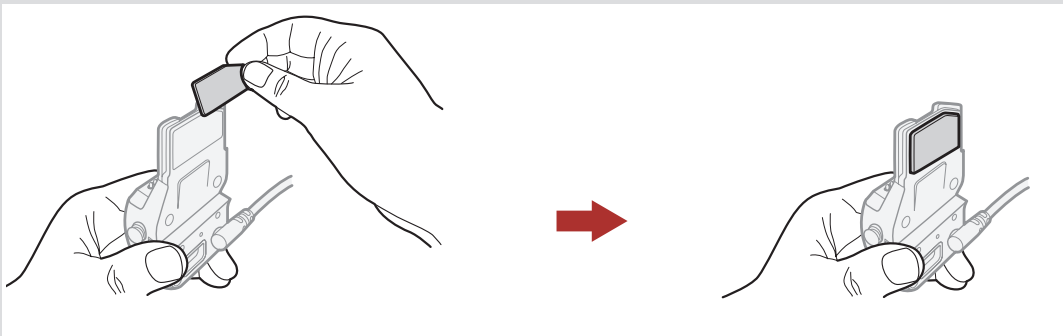

2. INSTALLING THE HEADSET ON YOUR HELMET

Helmet Installation


Using the Glued Surface Mounting Adapter

Switching the Microphone

Earbuds


External Mesh Intercom Antenna

2. Place the helmet speakers along with the hook and loop fasteners, centered to your ear, in the ear pockets of the helmet. If the helmet has deep ear pockets, you can use the speaker pads to place the speakers closer to your ears.

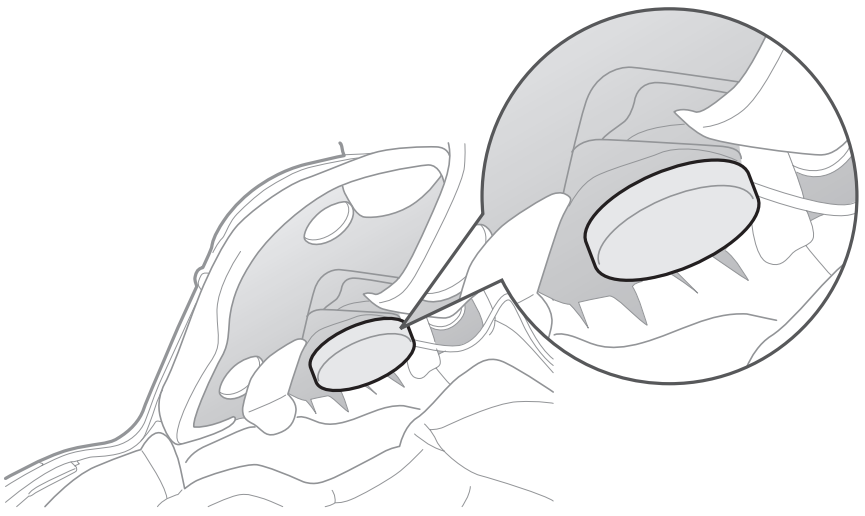

Note:

- The speaker with the shorter wire is for the left ear and the speaker with the longer one is for the right ear.
- Make sure that the microphone is located properly close to your mouth when you wear the helmet. Adjust the direction of the microphone so that the fin side of the microphone is facing outward, away from your lips.

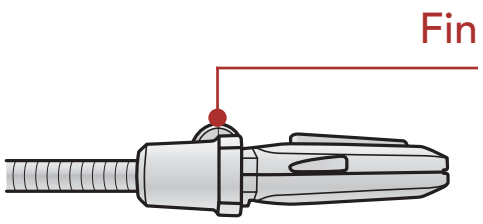

2. INSTALLING THE HEADSET ON YOUR HELMET

Helmet Installation


Using the Glued Surface Mounting Adapter

Switching the Microphone


Earbuds

External Mesh Intercom Antenna

3. Attach the headset main unit to the clamp unit. Slide the main unit down onto the clamp unit until it clicks firmly into the bottom portion of the clamp unit.

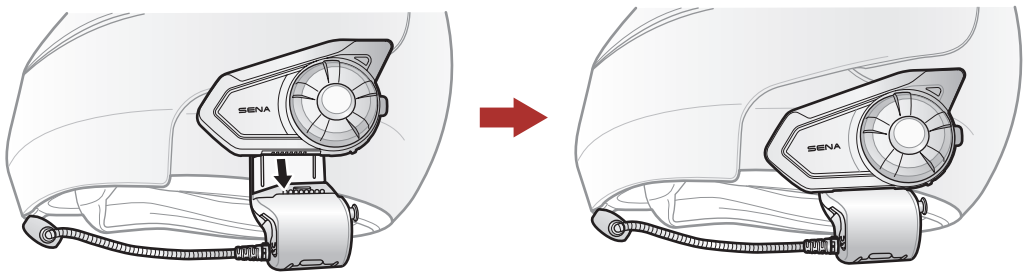

4. To remove the main unit from the clamp unit, press the Quick Release Button to slide it off the clamp unit.

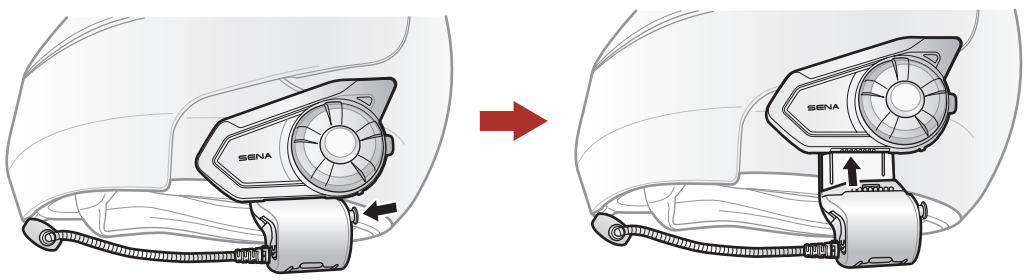

2. INSTALLING THE HEADSET ON YOUR HELMET

Helmet Installation

Using the Glued Surface Mounting Adapter

Switching the Microphone


Earbuds

External Mesh Intercom Antenna


2.2 Using the Glued Surface Mounting Adapter

If you have any problem equipping the clamp unit on the helmet for any reason, you may use the glued surface mounting adapter to attach the clamp unit on the external surface of the helmet.


1. Remove the speaker unit.

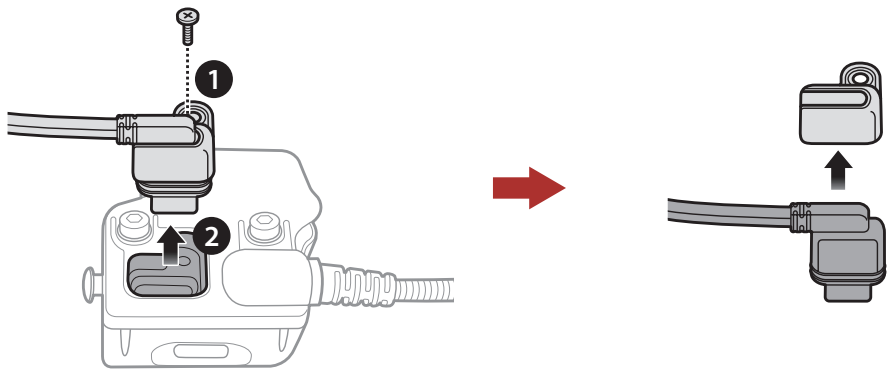

2. Remove the back plate.

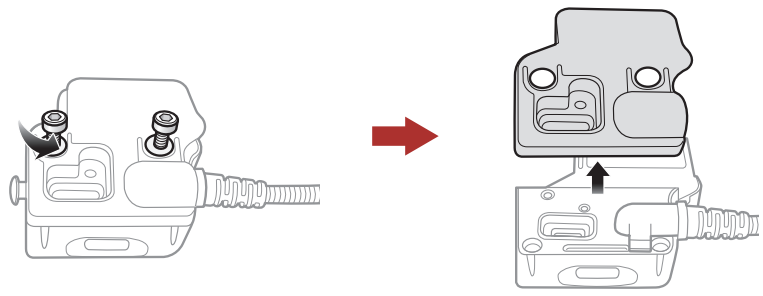

3. Remove the rubber pad and replace it with the thicker rubber pad included in the package.

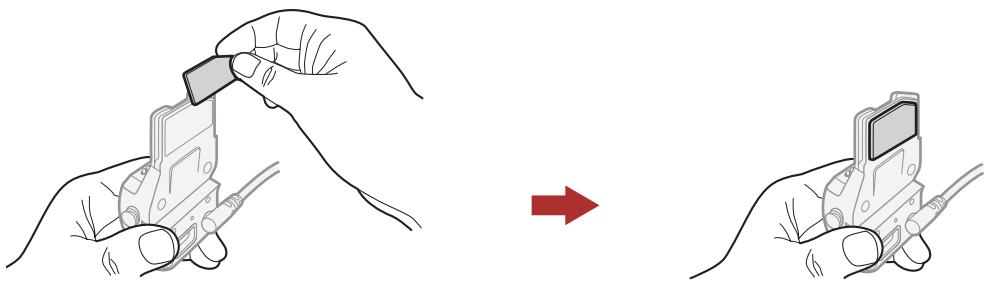

4. Hook on the adapter to the clamp unit then screw in the glued external adapter to the clamp unit.

2. INSTALLING THE HEADSET ON YOUR HELMET

Helmet Installation


Using the Glued Surface Mounting Adapter

Switching the Microphone

Earbuds


External Mesh Intercom Antenna

5. Reconnect the speaker cable to the speaker port.

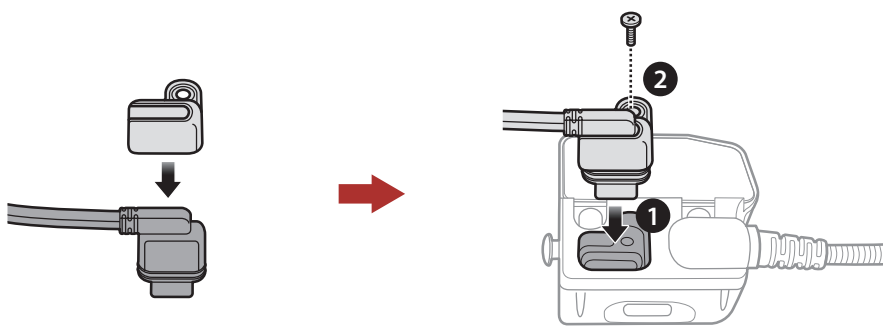

6. Locate a proper surface on the helmet to attach the unit then clean the helmet surface location with a moistened towel and allow to dry thoroughly.

7. Peel off the cover of the adhesive tape of the adapter and attach the unit on the proper surface of your helmet.

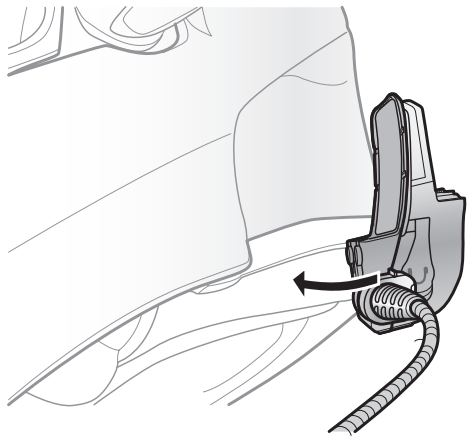

⚠ Caution: Sena recommends using the clamp unit. The glued surface mounting plate is provided for convenience, but is not the recommended mounting method. Sena is not responsible for its use.

2. INSTALLING THE HEADSET ON YOUR HELMET

Helmet Installation

Using the Glued Surface Mounting Adapter

Switching the Microphone


Earbuds

External Mesh Intercom Antenna

2.3 Switching the Microphone

If you want to use a different microphone instead of the static boom microphone, please refer to the following steps.

1. Remove the back plate of the clamp unit.
2. Connect the microphone according to your helmet type.
3. Lock the microphone to the clamp.
4. Reattach the back plate to cover the microphone and the speaker port.

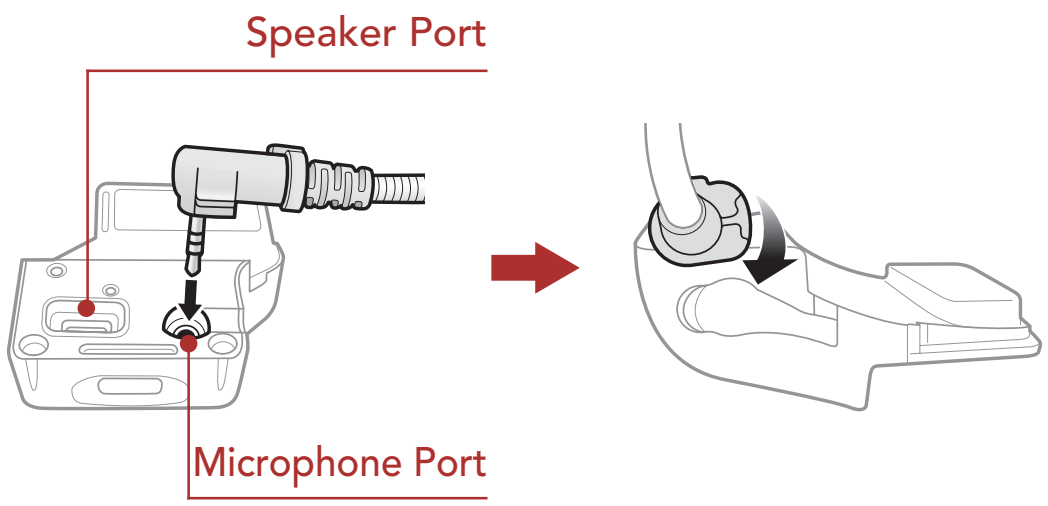

2. INSTALLING THE HEADSET ON YOUR HELMET

Helmet Installation

Using the Glued Surface Mounting Adapter


Switching the Microphone

Earbuds

External Mesh Intercom Antenna


2.3.1 Wired Boom Microphone

When installing the included wired boom microphone, place the hook and loop fastener at the end of the boom microphone between the internal helmet cheek pad and the internal wall of the helmet shell. The boom microphone should be mounted so it is facing close to your mouth when you wear the helmet.

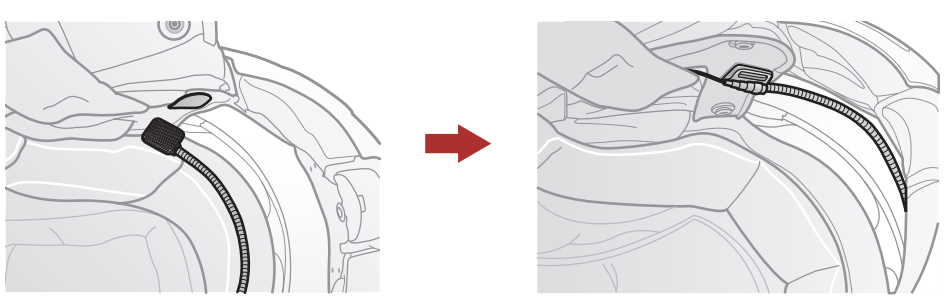

2.3.2 Wired Microphone

In case of the wired microphone, attach the enclosed hook and loop fastener for the wired microphone to the inside of the chin guard for full-face helmets. Place the wired microphone on the hook and loop fastener and connect it to the connector of the clamp unit.

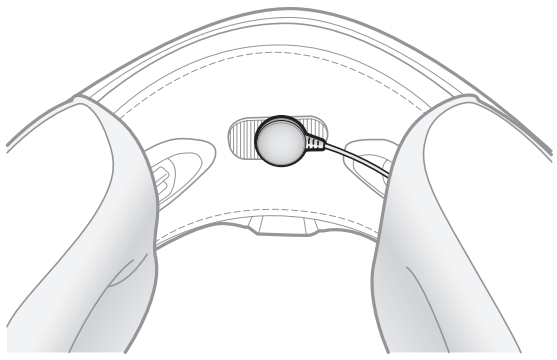

2. INSTALLING THE HEADSET ON YOUR HELMET

Helmet Installation

Using the Glued Surface Mounting Adapter


Switching the Microphone

Earbuds

External Mesh Intercom Antenna


2.4 Earbuds

You can connect your earbuds to the clamp while having the speakers connected to the clamp. The sound of the earbuds will be active while the sound of the outer speakers becomes inactive.

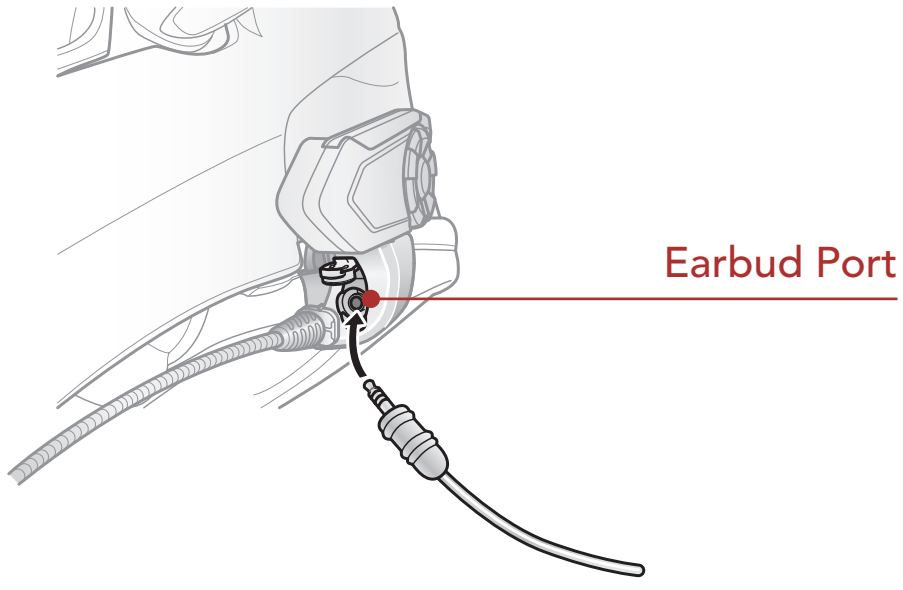

2.5 External Mesh Intercom Antenna


Pull the **Mesh Intercom** Antenna outwards slightly to unfold it.

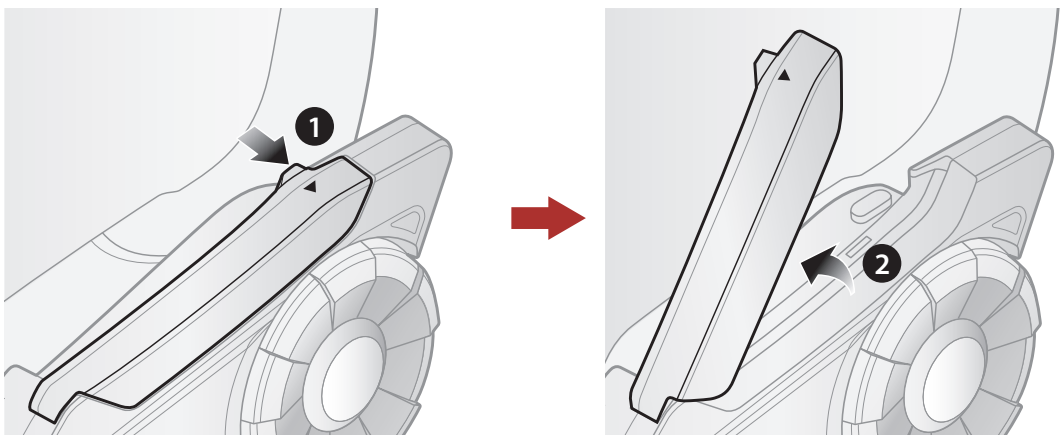

3. GETTING STARTED

3.1 Button Functions

Button Functions
Downloadable Sena Software
Powering On and Off
Charging
Checking the Battery Level
Volume Adjustment
Configuration Menu

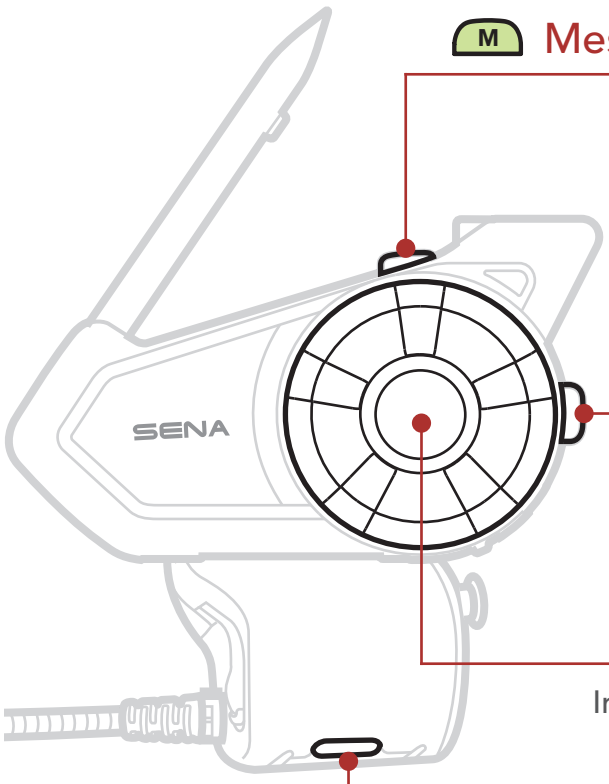

M Mesh Intercom Button

Mesh Intercom On/Off
Create Mesh Intercom
Join Existing Mesh
Accept Participant
Reject Participant

P Phone Button

Answer/End Phone Call
FM Tuner On/Off
Speed Dial

Jog Dial

Increase/Decrease Volume
Play/Pause Music
Track Forward/Back
Scan Radio Stations
Enter Intercom Pairing Mode
Enter Voice Configuration Settings

A Ambient Mode Button

Ambient Mode
Group Intercom
Voice Command

3. GETTING STARTED

Button Functions
Downloadable Sena Software
Powering On and Off
Charging
Checking the Battery Level
Volume Adjustment
Configuration Menu

3.2 Downloadable Sena Software

3.2.1 Sena 30K Utility App

By simply pairing your phone with your headset, you can use the **Sena 30K Utility App** for quicker and easier set up and management.

- App Features
  - Mesh Intercom, Bluetooth Intercom, Music, FM Radio, Device settings, Quick Start Guide, and User's Guide.
- Download
  - Android: Google Play Store > **'Sena 30K Utility'**
  - iOS: App Store > **'Sena 30K Utility'**





3.2.2 Sena Device Manager

The **Sena Device Manager** allows you to upgrade the firmware and configure its settings directly from your PC or Apple computer. Download the **Sena Device Manager** from **sena.com**.


3. GETTING STARTED


Button Functions
Downloadable Sena Software
Powering On and Off
Charging
Checking the Battery Level
Volume Adjustment
Configuration Menu

3.3 Powering On and Off


Press and hold the **Jog Dial** and **Phone Button** at the same time to turn the headset on or off.

Powering On

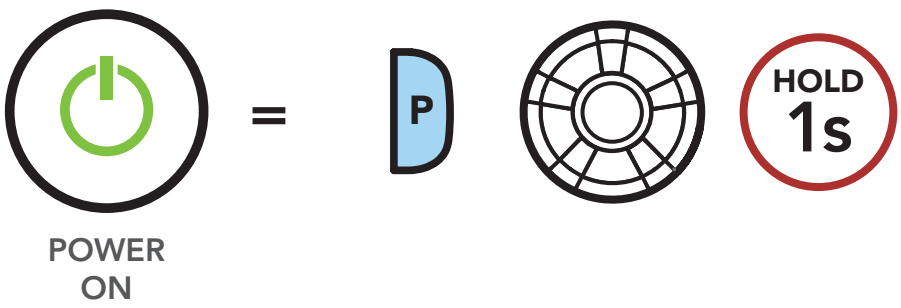




"Preparing headset"



"Hello"

Powering Off

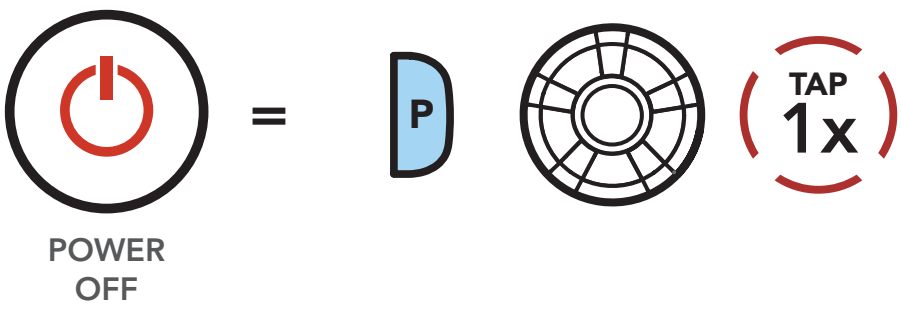


Note: If the Voice Command setting is disabled, the "Hello" voice prompt will be heard instantly after powering on the headset. Please refer to **Section 12: "Voice Command"** for more details.

3. GETTING STARTED

Button Functions
Downloadable Sena Software
Powering On and Off
Charging
Checking the Battery Level
Volume Adjustment
Configuration Menu

3.4 Charging

Charging the Headset

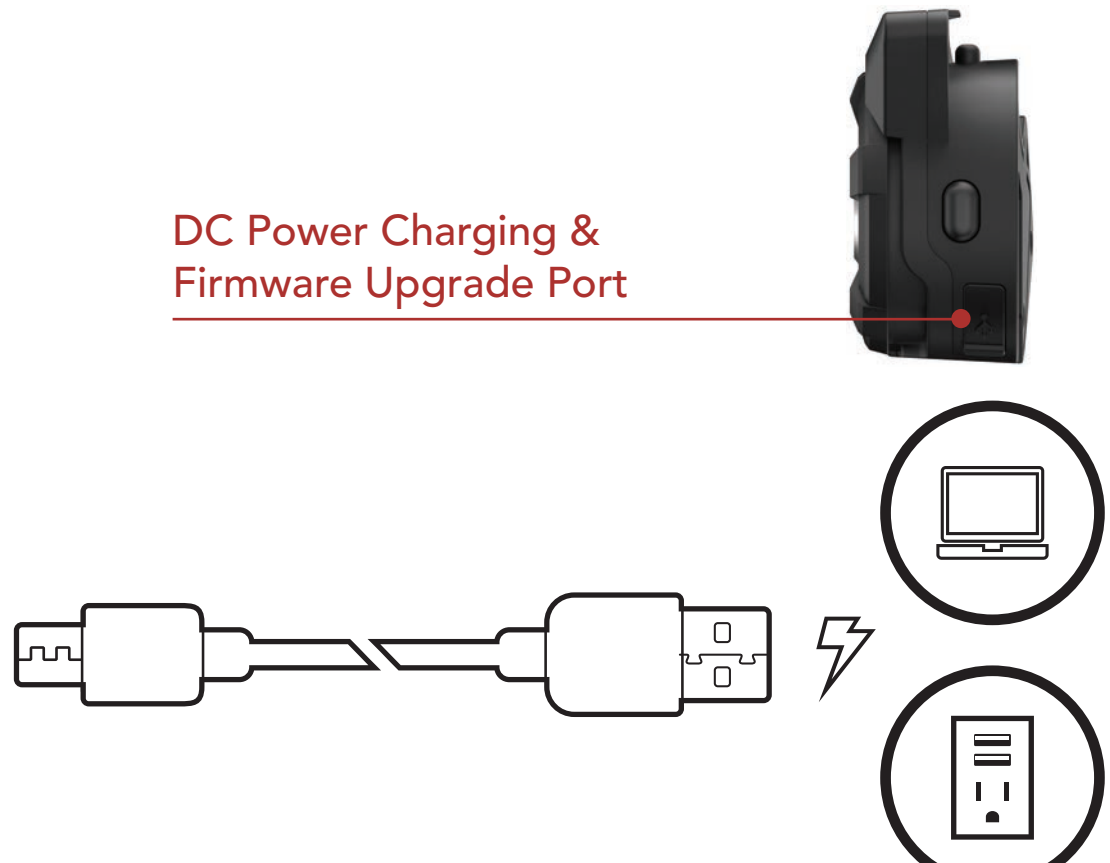

The headset will be fully charged in about 1.5 hours. (The charging time may vary depending on the charging method.)

Note:

- The headset includes a **Fast Charging** feature which allows it to charge quickly over a short period of time. For example, a user can get 5 hours of talk time after charging the headset for 20 minutes.
- Any 3rd party USB charger can be used with Sena products if the charger is approved by either the FCC, CE, IC or other locally approved agencies that Sena accepts.
- The headset is compatible with 5 V input USB-charged devices only.


3. GETTING STARTED

3.5 Checking the Battery Level


Button Functions
Downloadable Sena Software
Powering On and Off
Charging
Checking the Battery Level
Volume Adjustment
Configuration Menu

Instruction is for when powering the headset on.


Visual Method

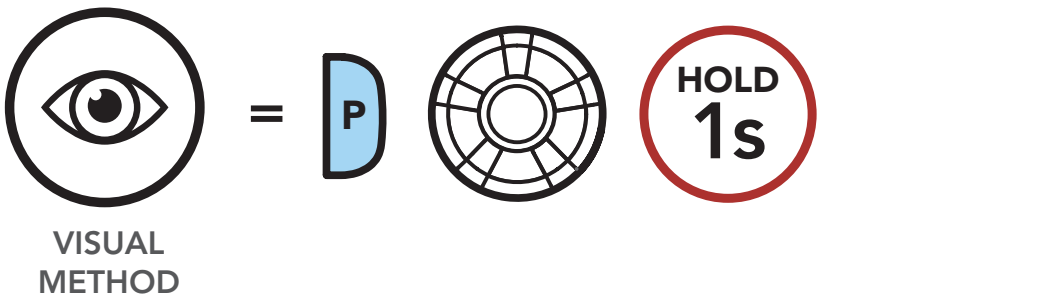

VISUAL METHOD

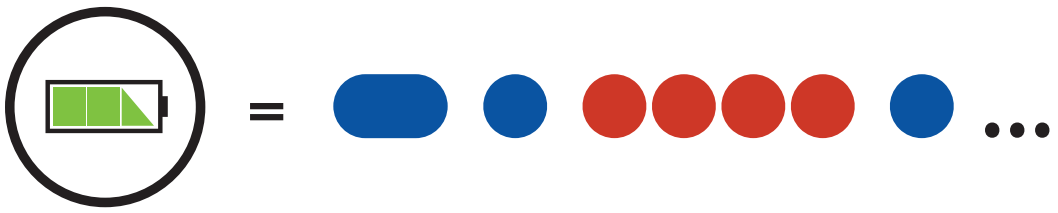

HIGH

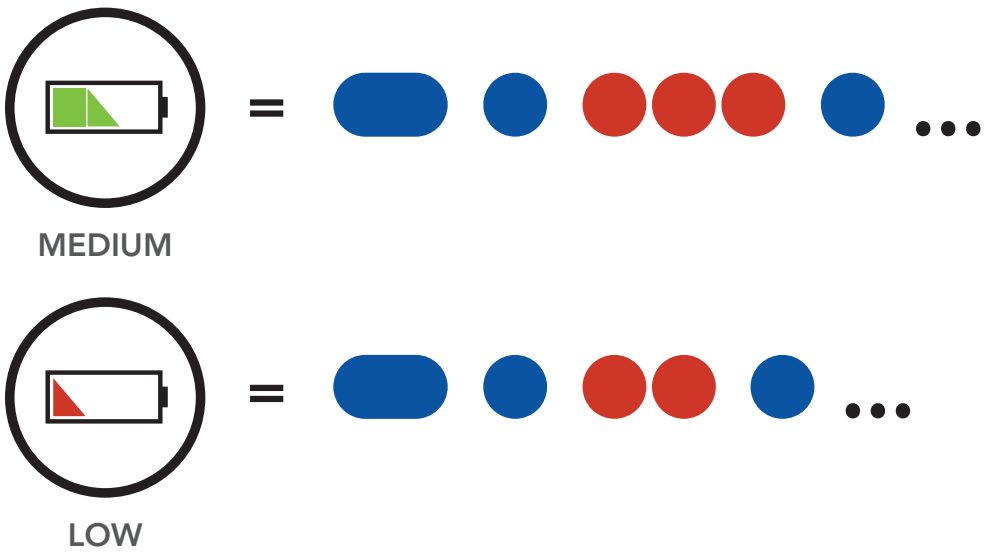

MEDIUM

LOW

3. GETTING STARTED

Button Functions

Downloadable Sena Software

Powering On and Off

Charging

Checking the Battery Level


Volume Adjustment

Configuration Menu


3.6 Volume Adjustment

You can raise or lower the volume by rotating the **Jog Dial** clockwise or counterclockwise. Volume is set and maintained independently at different levels for each audio source (i.e., phone, intercom), even when the headset is rebooted.

Volume Up

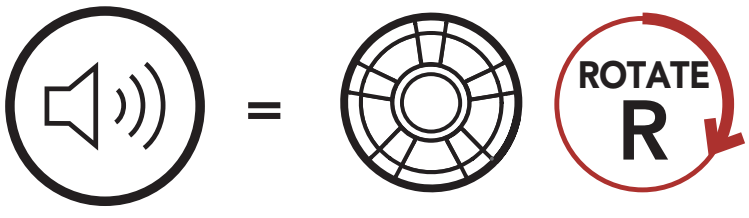

Volume Down

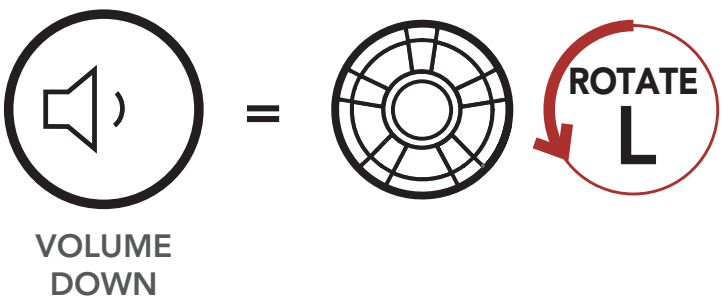

3. GETTING STARTED

Button Functions

Downloadable Sena Software

Powering On and Off

Charging

Checking the Battery Level

Volume Adjustment


Configuration Menu


3.7 Configuration Menu

The headset can be configured by following a series of voice prompts. Further details about each of these settings will be explained on the following pages.

1. To access the **Configuration Menu**, press and hold the **Jog Dial** for **10 seconds** until you hear the voice prompt, **"Configuration menu."**

Accessing the Configuration Menu

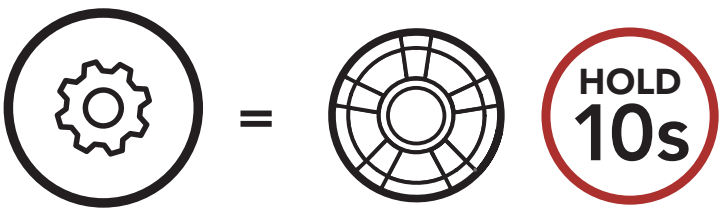



"Configuration menu"

3. GETTING STARTED

Button Functions

Downloadable Sena Software

Powering On and Off

Charging


Checking the Battery Level

Volume Adjustment


Configuration Menu

2. Rotate the **Jog Dial** clockwise or counterclockwise to navigate between the menus. You will hear voice prompts for each menu item. The list of functions is shown in the **"Headset Configuration Menu"** on page 28.

Navigating Forward through the Menu

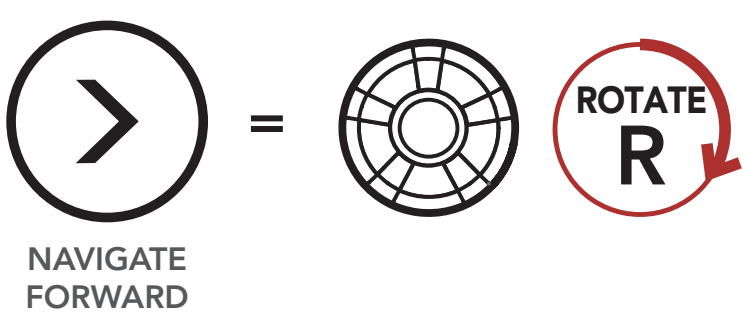

Navigating Backward through the Menu

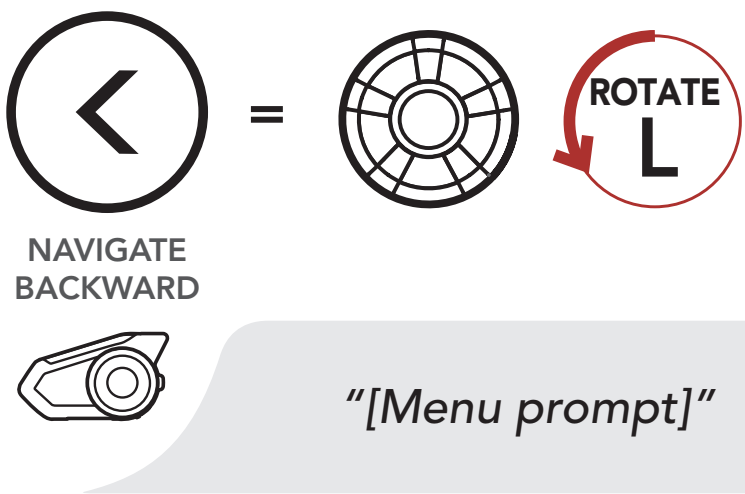


3. GETTING STARTED

Button Functions
Downloadable Sena Software
Powering On and Off
Charging
Checking the Battery Level
Volume Adjustment
Configuration Menu

3. You can enable the feature or execute the command by tapping the **Phone Button**.

Execute Menu Options

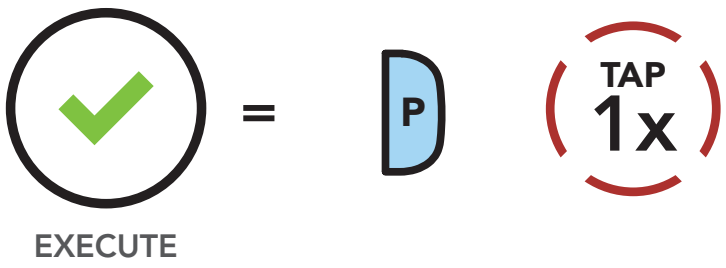

Headset Configuration Menu

Rotate the Jog Dial clockwise or counterclockwise	Tap the Phone Button
Delete All Pairings	Execute
Remote Control Pairing	Execute
Universal Intercom Pairing	Execute
Exit Configuration	Execute

4. PAIRING THE HEADSET WITH OTHER BLUETOOTH DEVICES

MENU

Mobile Phone

Additional Mobile Phones, MP3 Player or Sena SR10 Two-Way Radio Adapter


Advanced Selective Pairing: Hands-Free or A2DP Stereo

GPS Pairing


When using the headset with other Bluetooth devices for the first time, they'll need to be "paired." This enables them to recognize and communicate with one another whenever they're within range.

The headset can pair with multiple Bluetooth devices such as a mobile phone, GPS, MP3 player or Sena SR10 Two-Way Radio Adapter via **Mobile Phone Pairing, Second Mobile Phone Pairing and GPS Pairing**. The headset can also be paired with up to three other Sena headsets.

Pairs with up to three Sena Headsets

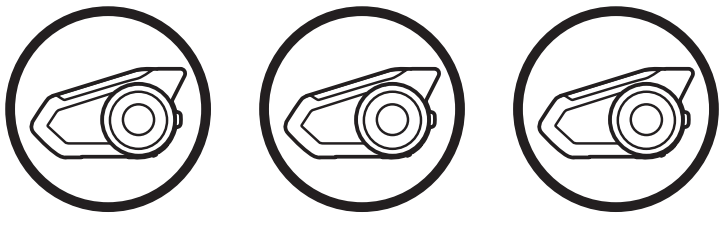

Also pairs with:

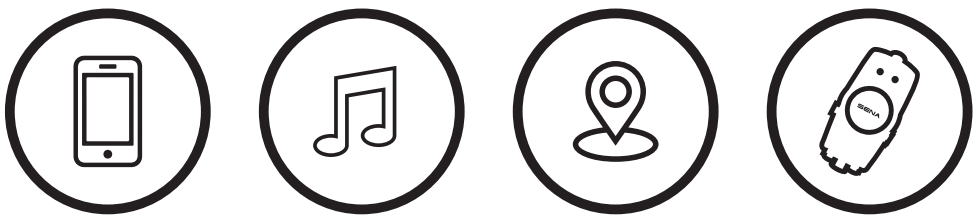

Note: Bluetooth Specifications: Bluetooth 2.4 GHz ~ 2.48 GHz / max output power 0.097mW

4. PAIRING THE HEADSET WITH OTHER BLUETOOTH DEVICES

Mobile Phone

Additional Mobile Phones, MP3 Player or Sena SR10 Two-Way Radio Adapter

Advanced Selective Pairing: Hands-Free or A2DP Stereo

GPS Pairing


4.1 Mobile Phone


There are two ways to pair the phone.

4.1.1 Pairing When the 30K is Turned Off

1. Press and hold the **Phone Button** and **Jog Dial** for **10 seconds** when the **30K** is turned off.

Mobile Phone Pairing

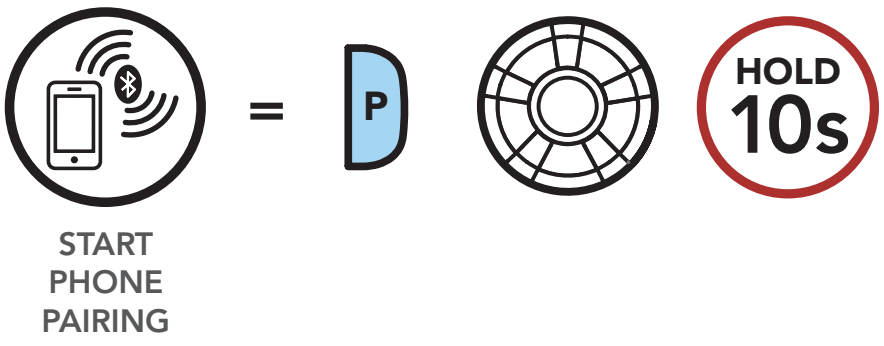




"Phone pairing"



Alternating blue and red flashing lights indicate **device is now discoverable.**

2. With your mobile phone in Bluetooth-pairing mode, select the headset in the list of devices detected.
3. If your mobile phone asks for a PIN, enter 0000.

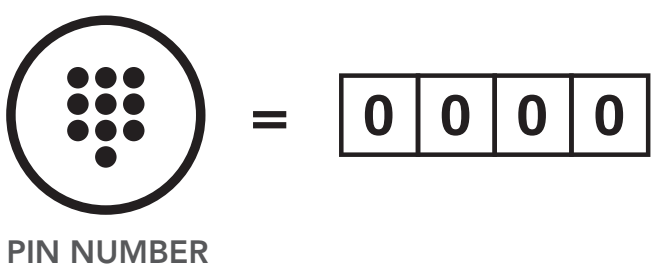

4. PAIRING THE HEADSET WITH OTHER BLUETOOTH DEVICES

Mobile Phone

Additional Mobile Phones, MP3 Player or Sena SR10 Two-Way Radio Adapter


Advanced Selective Pairing: Hands-Free or A2DP Stereo

GPS Pairing


4.1.2 Pairing When the 30K is Turned On

1. Press and hold the **Phone Button** for **5 seconds** when the **30K** is turned on.

Mobile Phone Pairing

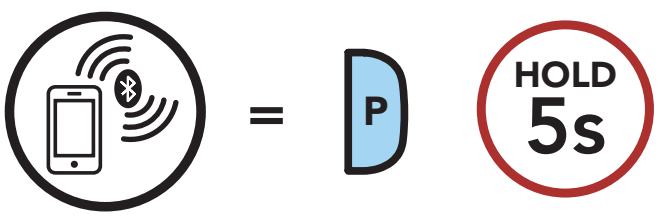

START PHONE PAIRING




"Phone pairing"



LED STATUS

Alternating blue and red flashing lights indicate **device is now discoverable.**

2. With your mobile phone in Bluetooth-pairing mode, select the headset in the list of devices detected.
3. If your mobile phone asks for a PIN, enter 0000.

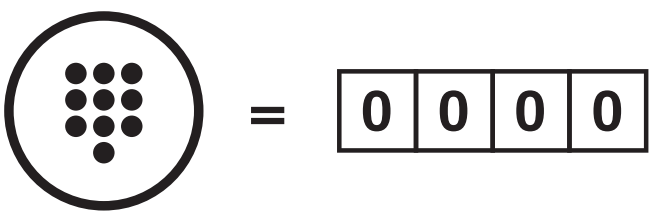


PIN NUMBER

4. PAIRING THE HEADSET WITH OTHER BLUETOOTH DEVICES

4.2 Additional Mobile Phones, MP3 Player or Sena SR10 Two-Way Radio Adapter

1. Execute **Second Mobile Phone Pairing** by holding down the **Jog Dial** for **5 seconds**. Tap the **Phone Button** once within **2 seconds**.

Second Mobile Phone Pairing

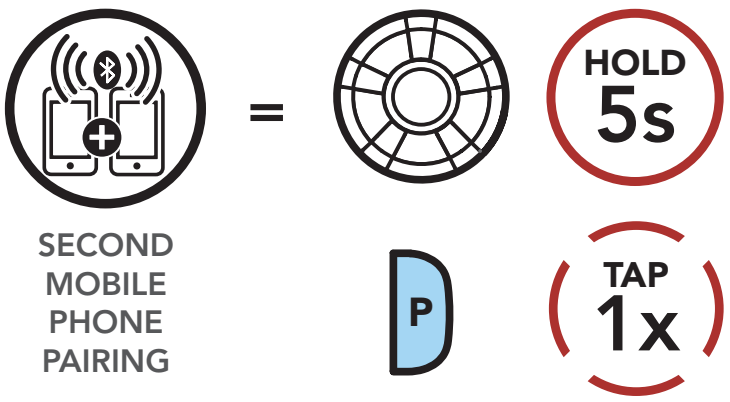


"Second mobile phone pairing"



Blue flashing lights indicates **device is now discoverable.**

2. With your mobile phone in Bluetooth-pairing mode, select the headset in the list of devices detected.
3. If your mobile phone asks for a PIN, enter 0000.

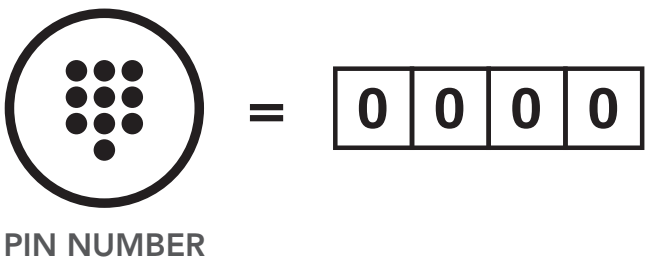

4. PAIRING THE HEADSET WITH OTHER BLUETOOTH DEVICES

Mobile Phone

Additional Mobile Phones, MP3 Player or Sena SR10 Two-Way Radio Adapter

Advanced Selective Pairing: Hands-Free or A2DP Stereo

GPS Pairing


4.3 Advanced Selective Pairing: Hands-Free or A2DP Stereo

Phone Pairing allows the headset to establish two Bluetooth profiles: **Hands-Free** or **A2DP Stereo**. **Advanced Selective Pairing** allows the headset to separate the profiles to enable connection with two devices.


4.3.1 Phone Selective Pairing - Hands-Free Profile


1. Execute **Phone Selective Pairing** by holding down the **Phone Button** for **5 seconds**. Tap the **Phone Button** once within **2 seconds**.

Phone Selective Pairing

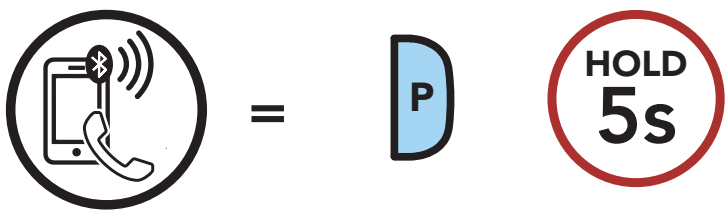

PHONE SELECTIVE PAIRING

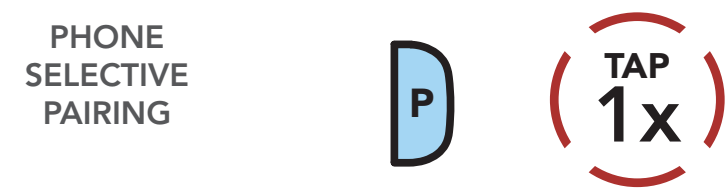

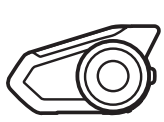

"Phone selective pairing"



LED STATUS

= Blue flashing lights indicates **device is now discoverable.**

4. PAIRING THE HEADSET WITH OTHER BLUETOOTH DEVICES

MENU


Mobile Phone

Additional Mobile Phones, MP3 Player or Sena SR10 Two-Way Radio Adapter

Advanced Selective Pairing: Hands-Free or A2DP Stereo

GPS Pairing


2. With your mobile phone in Bluetooth-pairing mode, select the headset in the list of devices detected.
3. If your mobile phone asks for a PIN, enter 0000.

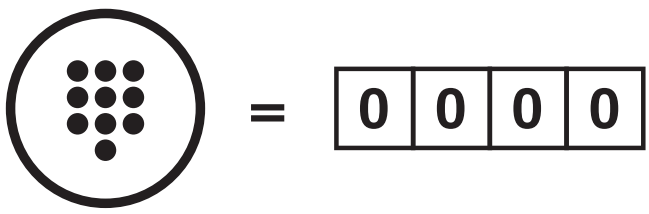


4.3.2 Media Selective Pairing - A2DP Profile

1. Execute **Media Selective Pairing** by holding down the **Phone Button** for **5 seconds**. Tap the **Jog Dial** once within **2 seconds**.

Media Selective Pairing

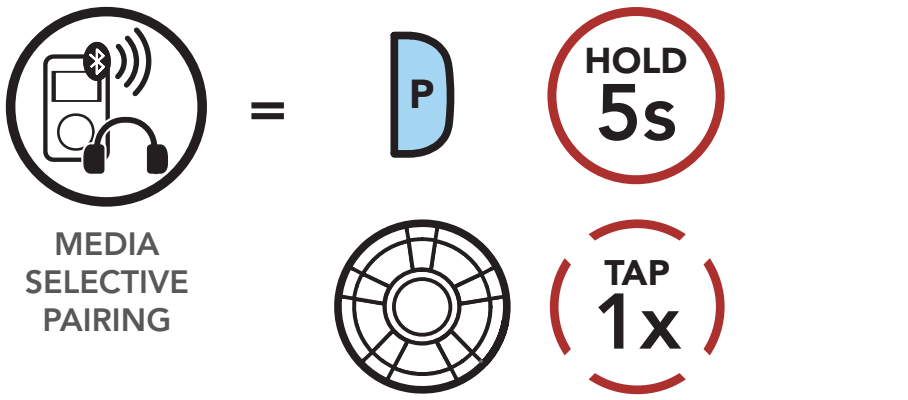



"Media selective pairing"



= Red flashing lights indicate **device is now discoverable.**

4. PAIRING THE HEADSET WITH OTHER BLUETOOTH DEVICES

MENU


Mobile Phone

Additional Mobile Phones, MP3 Player or Sena SR10 Two-Way Radio Adapter

Advanced Selective Pairing: Hands-Free or A2DP Stereo

GPS Pairing

2. With your mobile phone in Bluetooth-pairing mode, select the headset in the list of devices detected.
3. If your mobile phone asks for a PIN, enter 0000.

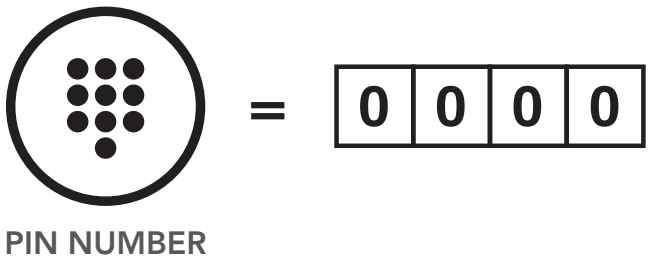

4. PAIRING THE HEADSET WITH OTHER BLUETOOTH DEVICES

MENU

Mobile Phone

Additional Mobile Phones, MP3 Player or Sena SR10 Two-Way Radio Adapter


Advanced Selective Pairing: Hands-Free or A2DP Stereo


GPS Pairing

4.4 GPS Pairing

1. Execute **GPS Pairing** by holding down the **Jog Dial** for **5 seconds**. Within **2 seconds**, tap the **Phone Button** once to hear the voice prompt, **"Second mobile phone pairing"**. Again within **2 seconds**, tap the **Phone Button** to hear the voice prompt, **"GPS pairing"**.

GPS Pairing

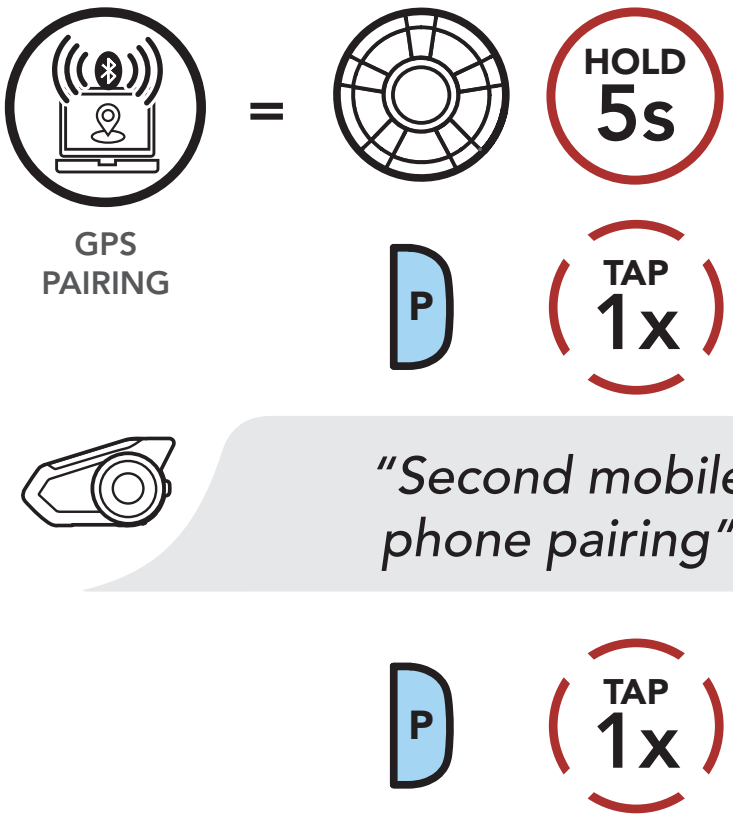

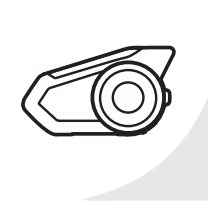

Green flashing lights indicates **device is now discoverable.**

4. PAIRING THE HEADSET WITH OTHER BLUETOOTH DEVICES

MENU


Mobile Phone

Additional Mobile Phones, MP3 Player or Sena SR10 Two-Way Radio Adapter

Advanced Selective Pairing: Hands-Free or A2DP Stereo

GPS Pairing

2. With your Bluetooth device on the GPS navigation screen, select the headset in the list of devices detected.
3. If your Bluetooth device asks for a PIN, enter 0000.

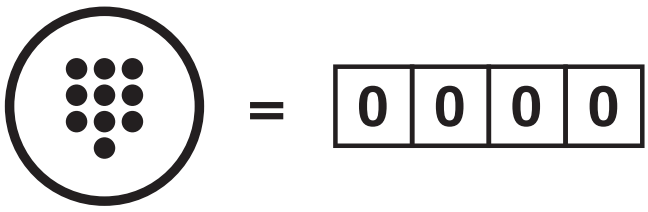

Note: If you pair your GPS device via GPS Pairing, its instruction will not interrupt your Mesh Intercom conversations, but overlay with them. Bluetooth intercom conversations will be interrupted by GPS instructions.

5. MOBILE PHONE USAGE


5.1 Making and Answering Calls

Making and Answering Calls


Speed Dialing

VOX Phone


Answer a Call

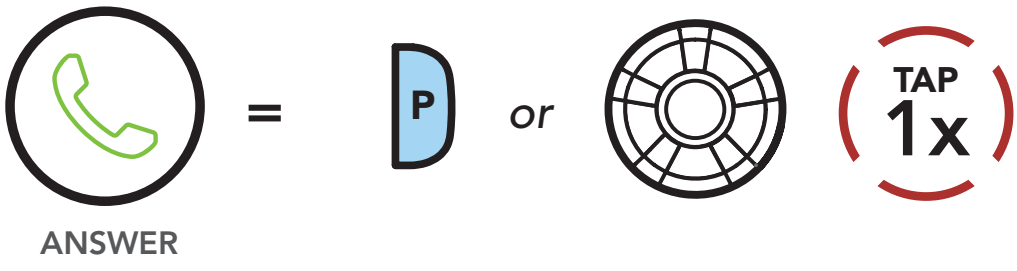


End a Call

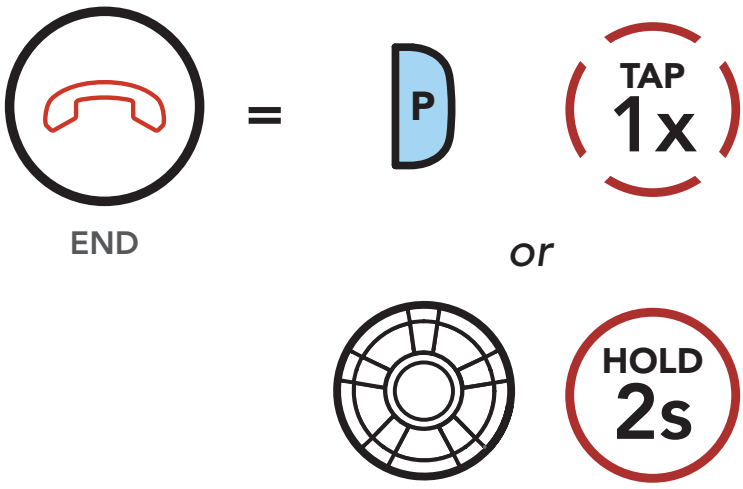

Reject a Call

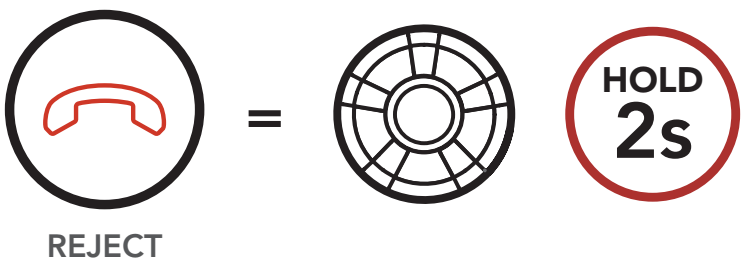

Make a Call with Voice Dialer

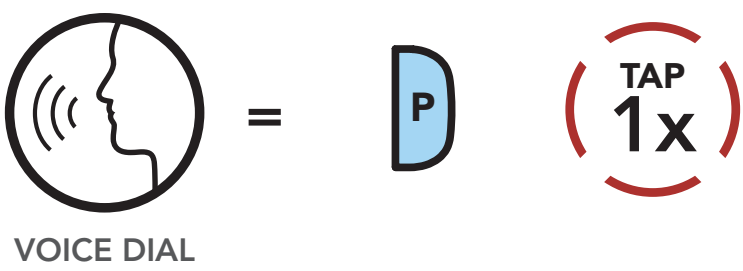

Note: If you have a GPS device connected, you will not hear its voice navigations during a phone call.

5. MOBILE PHONE USAGE

Making and Answering Calls

Speed Dialing

VOX Phone

5.2 Speed Dialing


5.2.1 Assigning Speed Dial Presets


Speed Dial Presets could be assigned in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.

5.2.2 Using Speed Dial Presets

1. Tap the **Phone Button** twice to enter into the **Speed Dial** menu. You will hear the voice prompt, **"Speed dial."**

Enter Speed Dial Mode

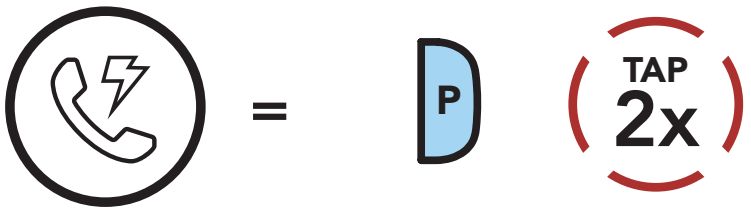





"Speed dial"

2. Rotate the **Jog Dial** clockwise or counterclockwise to navigate between the **Speed Dial Presets**.

Navigate Forward through Speed Dial Preset Numbers

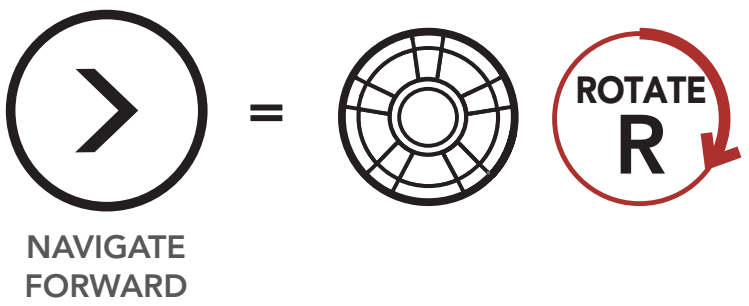

Navigate Backward through Speed Dial Preset Numbers

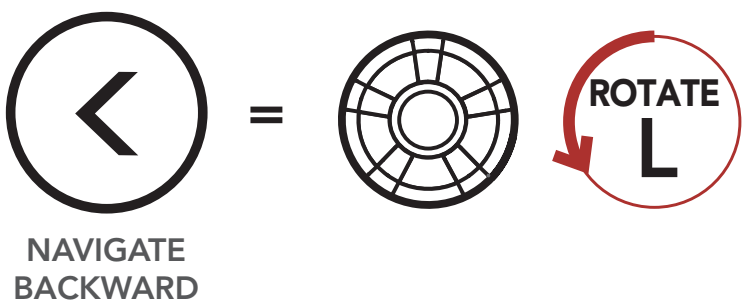

5. MOBILE PHONE USAGE


Making and Answering Calls

Speed Dialing


VOX Phone

3. To call one of your **Speed Dial Presets**, tap the **Phone Button** when you hear the prompt, **"Speed dial (#)."**

Call a Speed Dial Preset Number

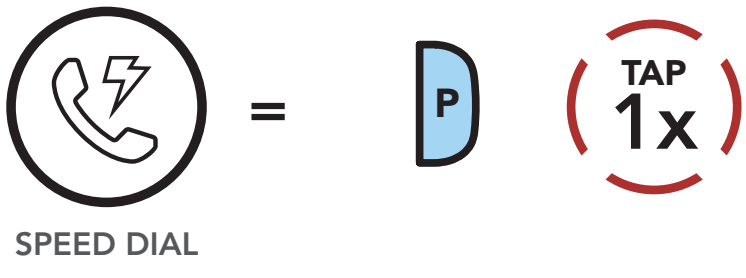


SPEED DIAL




"Speed dial (#)"

4. To redial the last number called, tap the **Phone Button** when you hear the prompt, **"Last number redial."**

Redial Last Number

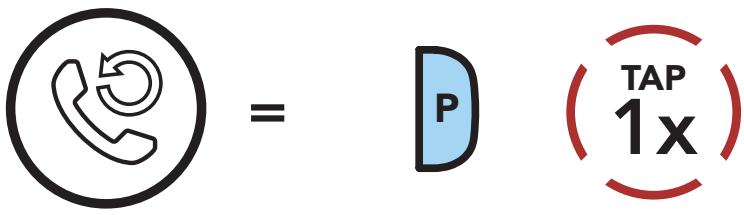

REDIAL



"Last number redial"

5. MOBILE PHONE USAGE

5.3 VOX Phone (Default: Enable)

A **VOX Phone** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.

With **VOX Phone** enabled, you can answer incoming calls by simply saying a word loudly enough, unless you are connected to intercom. For example, when you hear a series of beeps for an incoming call, you can answer the phone by saying **"Hello"** or any other word loudly. If this mode is disabled, you have to tap the **Jog Dial** or the **Phone Button** to answer an incoming call.


6. STEREO MUSIC

6.1 Playing Music with Bluetooth Devices

Playing Music with Bluetooth Devices
Playing Music with non-Bluetooth Devices
Music Sharing
Audio Equalizer
Smart Volume Control


1. To play or pause music, press and hold the **Jog Dial** for **1 second** until you hear a double beep.

Play/Pause

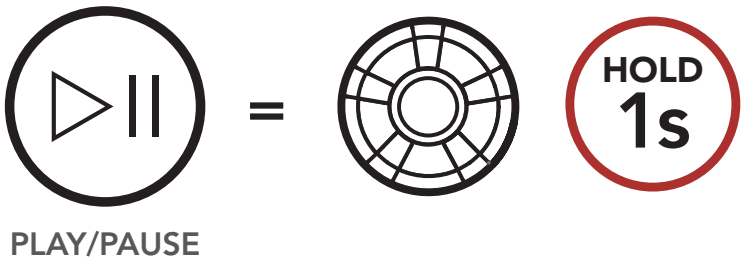


2. To adjust the volume, rotate the **Jog Dial** clockwise or counterclockwise.

Volume Up

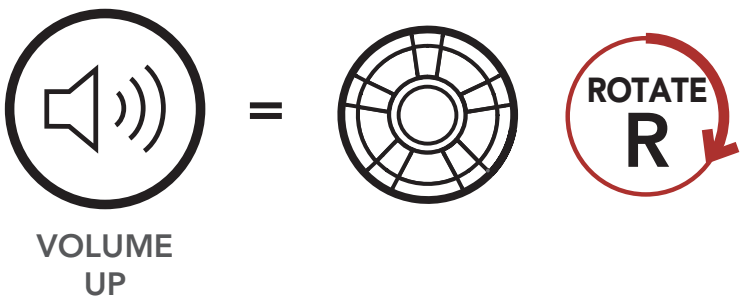

Volume Down

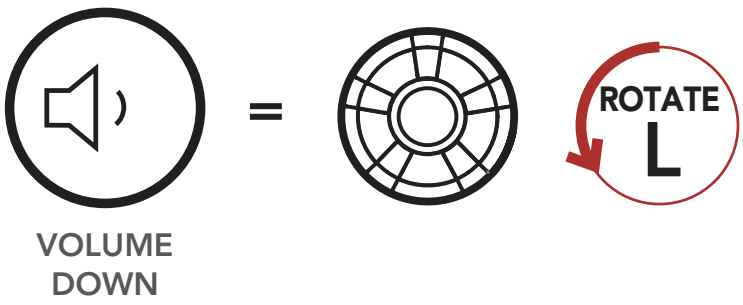

6. STEREO MUSIC

Playing Music with Bluetooth Devices

Playing Music with non-Bluetooth Devices


Music Sharing

Audio Equalizer

Smart Volume Control


3. To track forward or back, rotate while pressing the **Jog Dial** clockwise or counterclockwise.

Track Forward

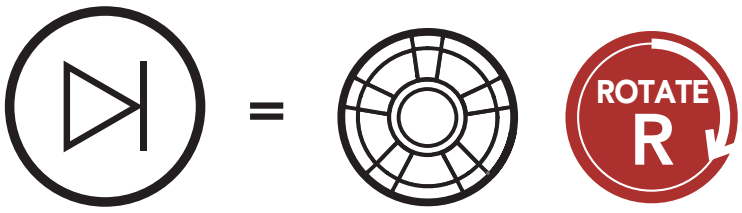

SKIP TRACK FORWARD


Track Backward

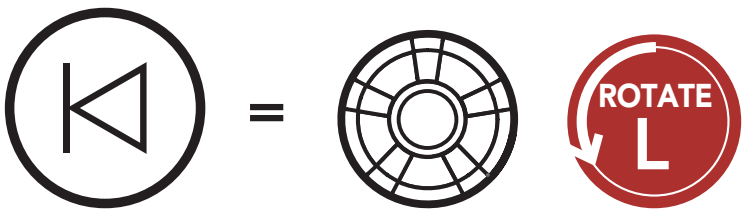

SKIP TRACK BACKWARD

6.2 Playing Music with non-Bluetooth Devices

You can play music that is stored on non-Bluetooth devices such as MP3 players. To connect your device to the headset, plug the enclosed 2.5 to 3.5 mm audio cable into the AUX ports, both on the headset and on your device.

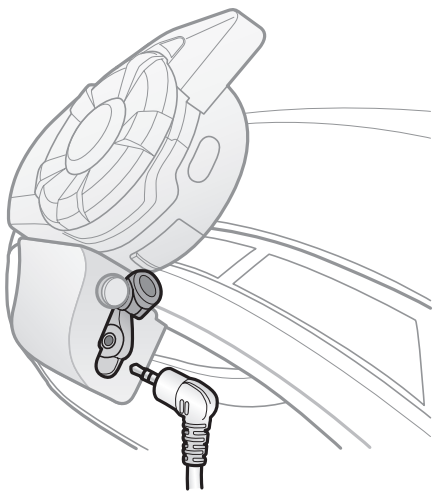

6. STEREO MUSIC

Playing Music with Bluetooth Devices

Playing Music with non-Bluetooth Devices


Music Sharing

Audio Equalizer


Smart Volume Control

To adjust the volume, rotate the **Jog Dial** clockwise or counterclockwise. You can also adjust the volume directly on the connected device.

Volume Up

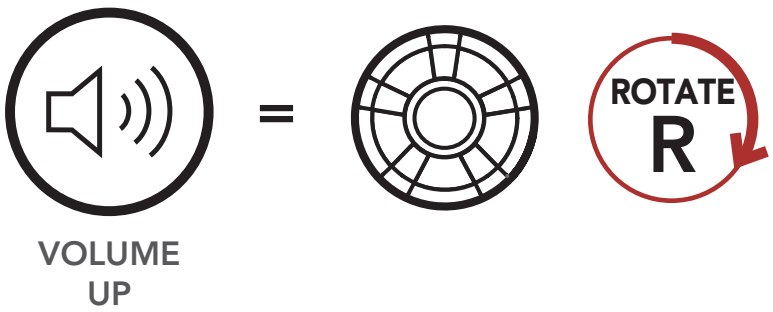

Volume Down

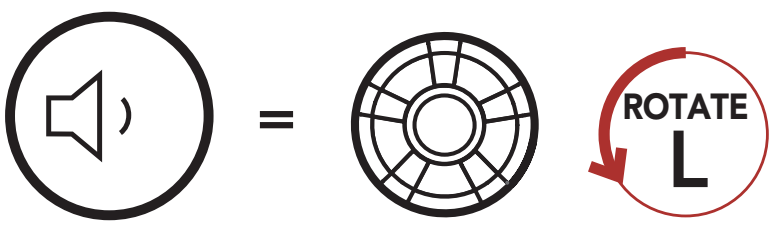

6.3 Music Sharing

You can start sharing music with one intercom friend using Bluetooth stereo music during a two-way intercom conversation and one participant of a Mesh. Both you and your intercom friend can remotely control music playback such as track forward and track back. If you start sharing music while Bluetooth intercom and Mesh Intercom are running at the same time, then music shared during Bluetooth intercom will take priority over music shared during Mesh Intercom. The Creator will send a request message to a headset connected during Mesh Intercom and will share music with the first participant that accepts the request.

MENU

6. STEREO MUSIC

Playing Music with Bluetooth Devices


Playing Music with non-Bluetooth Devices

Music Sharing


Audio Equalizer

Smart Volume Control

Bluetooth Intercom Music Sharing

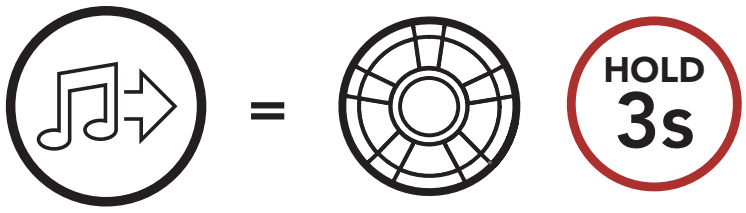


SHARE MUSIC




"Music sharing on"

Mesh Intercom Music Sharing [Creator]

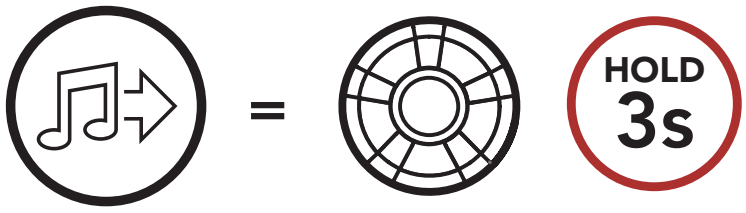


SHARE MUSIC




"Music sharing on"


[Participant]



"Would you like to accept music sharing?"

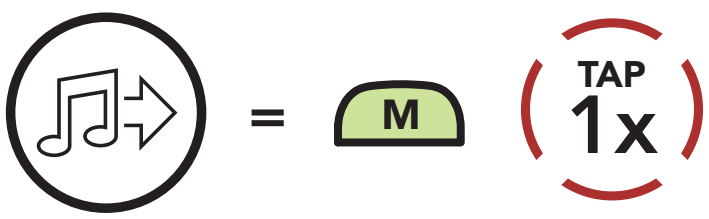

ACCEPT

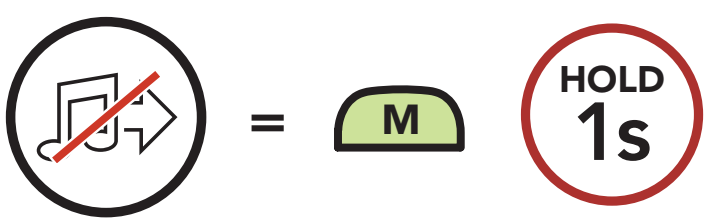

REJECT

6. STEREO MUSIC

Playing Music with Bluetooth Devices

Playing Music with non-Bluetooth Devices

Music Sharing

Audio Equalizer

Smart Volume Control

6.4 Audio Equalizer (Default: Off)

You can use the **Audio Equalizer** to increase/decrease the decibel level of different frequency ranges of audio.

Balance will adjust all of the frequency ranges to be the same volume level (0 dB). **Bass Boost** will increase the bass range of audio (20 Hz - 250 Hz). **Mid Boost** will increase the mid range of audio (250 Hz - 4 kHz). **Treble Boost** will increase the high range of audio (4 kHz - 20 kHz).

6.5 Smart Volume Control (Default: Disable)

A **Smart Volume Control** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.

Enabling **Smart Volume Control** automatically changes the level of the speaker volume based on the level of the environment noise. You can enable it by setting the sensitivity to low, medium or high.

7. MESH INTERCOM

What is Mesh Intercom?

Starting Mesh Intercom

Using the Mesh in Open Mesh

Using Mesh in Group Mesh

Reset Mesh

Toggling Open Mesh/Group Mesh


Enable/ Disable Mic (Default: Enable)

7.1 What is Mesh Intercom?

Mesh Intercom™ is a dynamic communication system created by Sena that provides instant and effortless bike-to-bike communication without a pre-grouping process. **Mesh Intercom** allows riders to connect and communicate with nearby users without the need to pair each headset together.

The working distance between each **30K** in **Mesh Intercom** can be up to 2 km (1.2 miles) in open terrain. In open terrain, the **Mesh** can be extended up to 8 km (5 miles) between a minimum of six users. Within the same channel in **Open Mesh™** or the same private group in **Group Mesh™**, six users can talk at the same time and enjoy the optimal quality for their conversation.

Mesh Intercom

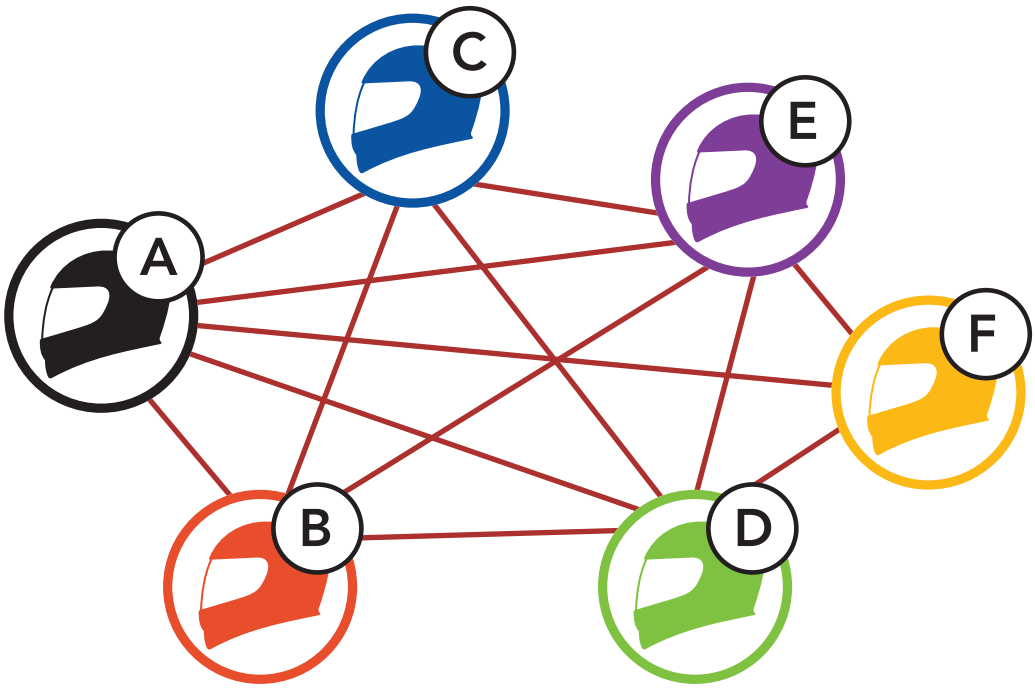

7. MESH INTERCOM

What is Mesh Intercom?

Starting Mesh Intercom

Using the Mesh in Open Mesh

Using Mesh in Group Mesh

Reset Mesh


Toggling Open Mesh/Group Mesh


Enable/ Disable Mic (Default: Enable)

7.1.1 Open Mesh


Open Mesh is an open group intercom function. Users can freely communicate with each other in the same **Open Mesh** channel and select which channel (1-9) to use through the headset.

It can connect with a virtually unlimited number of users in each channel.

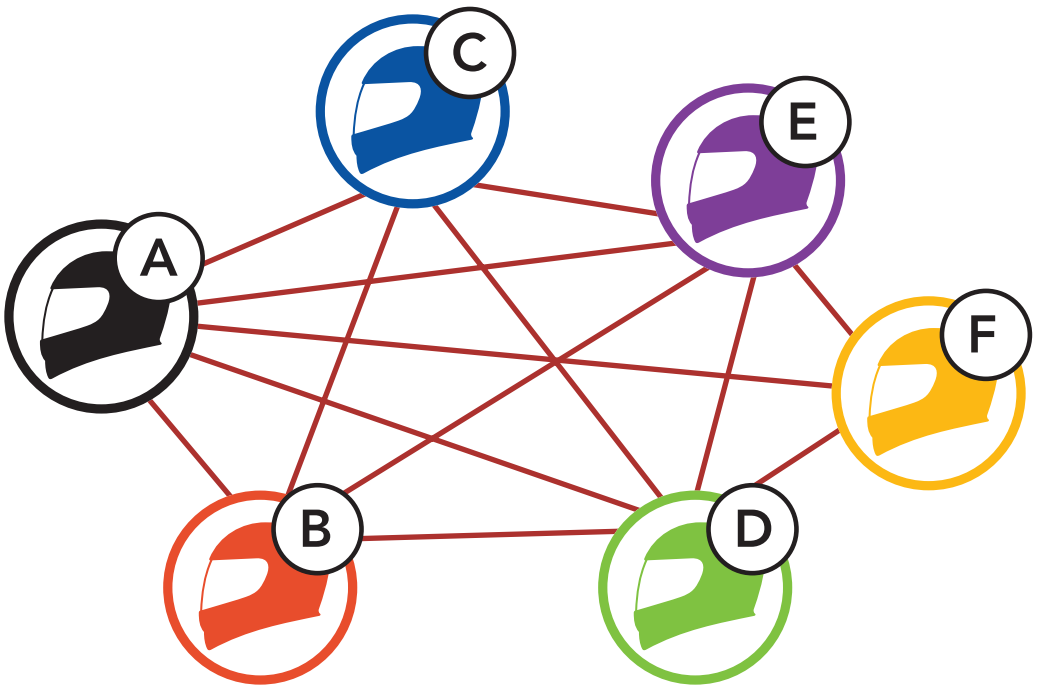

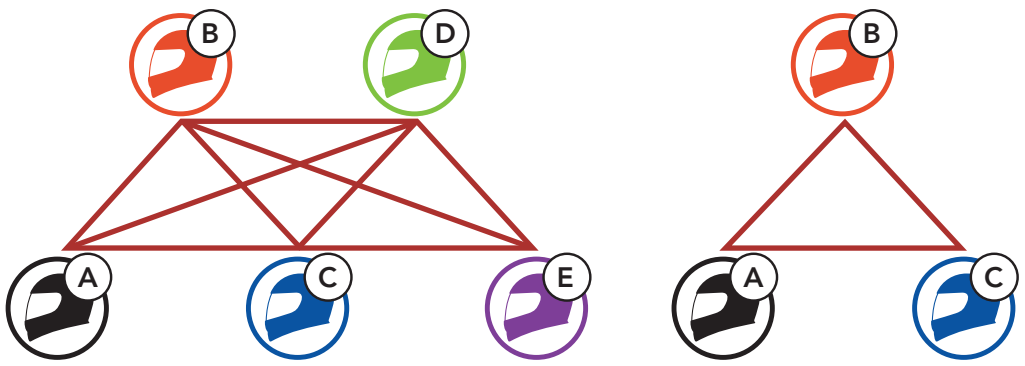

Channel 1 Channel 2

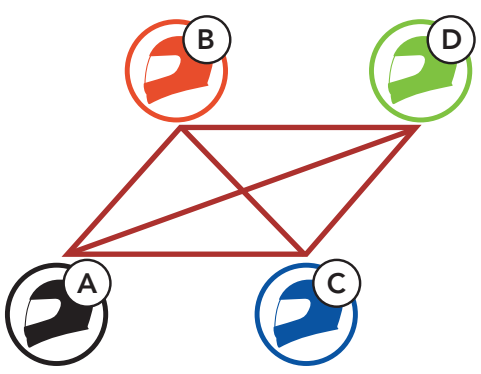

Channel 9

7. MESH INTERCOM

What is Mesh Intercom?

Starting Mesh Intercom

Using the Mesh in Open Mesh

Using Mesh in Group Mesh

Reset Mesh


Toggling Open Mesh/Group Mesh

Enable/ Disable Mic (Default: Enable)

7.1.2 Group Mesh

Group Mesh is a closed group intercom function that allows users to join, leave, or rejoin a group intercom conversation without pairing each headset. Users can freely communicate with each other in the same private group in **Group Mesh**.

For closed intercom conversations using **Mesh Intercom**, a **Group Mesh** needs to be created by the users. When users create a private group in **Group Mesh** by **Mesh Grouping**, the headset automatically switches from **Open Mesh** to **Group Mesh**. Up to 24 users can all be connected in each private group.

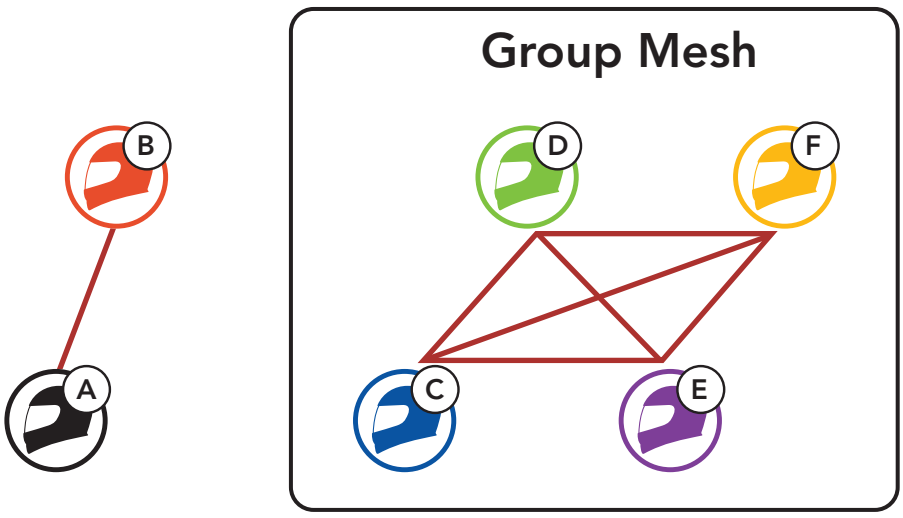

7. MESH INTERCOM

What is Mesh Intercom?

Starting Mesh Intercom

Using the Mesh in Open Mesh

Using Mesh in Group Mesh

Reset Mesh


Toggling Open Mesh/Group Mesh

Enable/ Disable Mic (Default: Enable)


7.2 Starting Mesh Intercom

When **Mesh Intercom** is enabled, the **30K** will automatically connect to nearby **30K** users and allow them to talk to each other by pressing the **Mesh Intercom Button**.

Mesh Intercom On

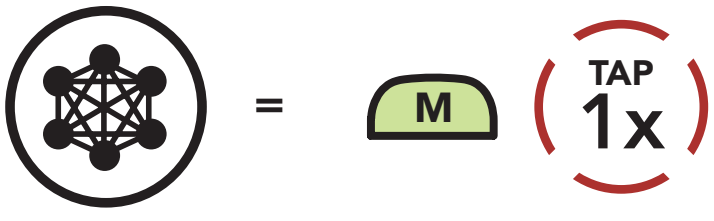

Mesh Intercom Off

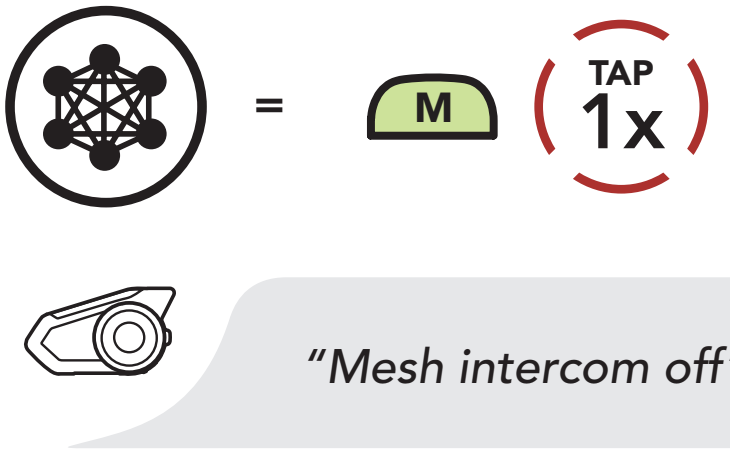

Note: Open Mesh and **Group Mesh** cannot communicate with the previous modes **Public Mode** and **Private Mode**. In case of no communication, **the headset should be upgraded to the latest firmware**.

7.3 Using the Mesh in Open Mesh

When **Mesh Intercom** is enabled, the headset will be in **Open Mesh (default: channel 1)** initially.

7. MESH INTERCOM

What is Mesh Intercom?

Starting Mesh Intercom

Using the Mesh in Open Mesh

Using Mesh in Group Mesh


Reset Mesh

Toggling Open Mesh/Group Mesh


Enable/ Disable Mic (Default: Enable)

7.3.1 Channel Setting (Default: channel 1)

If the **Open Mesh** communication experiences interference because other groups are also using **channel 1 (default)**, change the channel. You can select from channels 1 to 9.

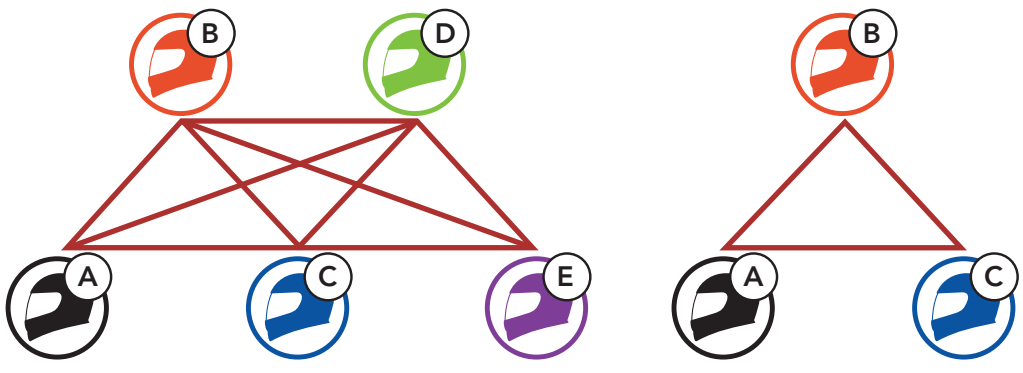



Channel 1 **Channel 2**

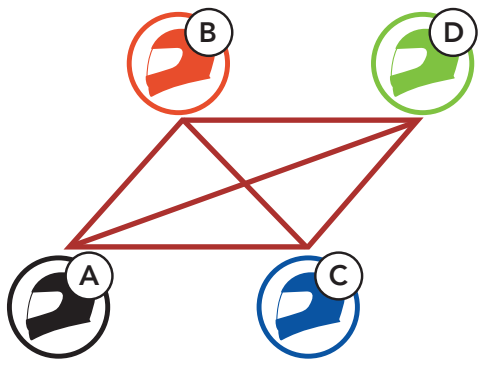

Channel 9

Enter into the Channel Setting

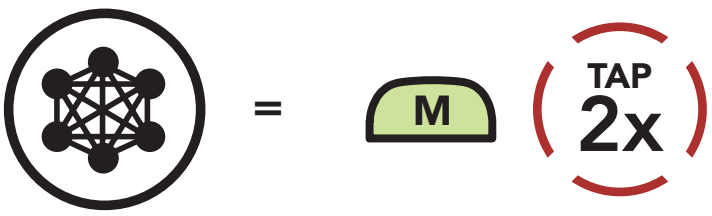

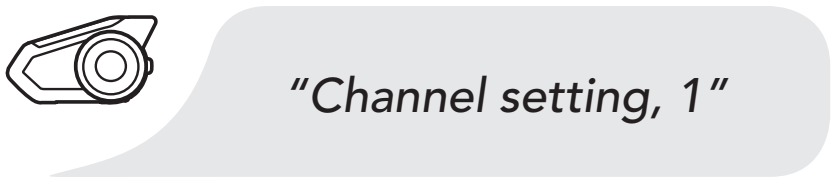

7. MESH INTERCOM

What is Mesh Intercom?

Starting Mesh Intercom

Using the Mesh in Open Mesh

Using Mesh in Group Mesh


Reset Mesh

Toggling Open Mesh/Group Mesh


Enable/ Disable Mic (Default: Enable)

Navigate Between Channels

(1 → 2 → ••• → 8 → 9 → Exit → 1 → •••)

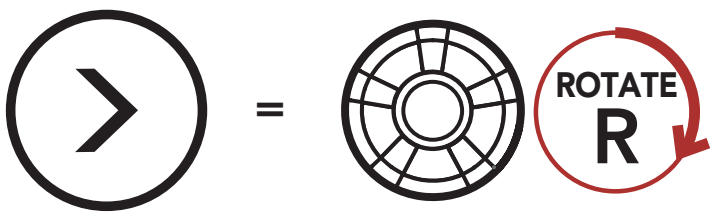



or

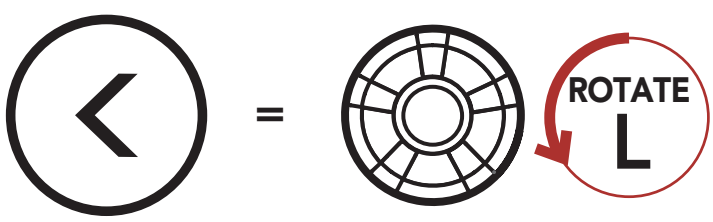



Save the Channel

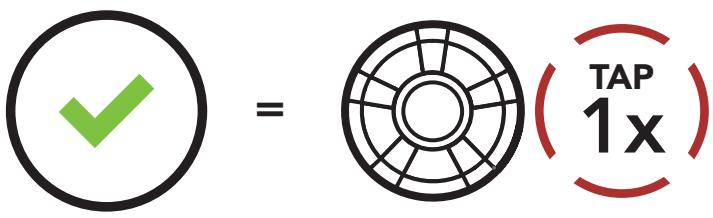

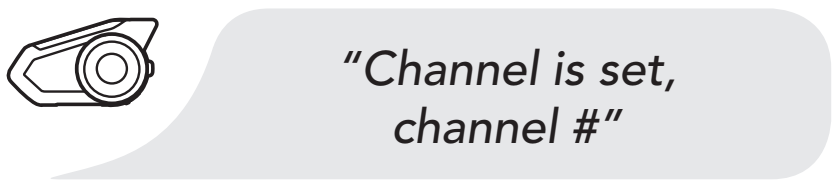

Note:

- **Channel Setting** always starts with channel 1.
- If you do not press any button for approximately **10 seconds** in a specific channel, the channel is automatically saved.
- If you want to cancel during **Channel Setting**, tap the **Phone Button**.
- The channel will be remembered even if you turn off the **30K**.
- You can also change the **Channel Setting** of the headset through the **Sena Device Manager** or the **Sena 30K Utility App**.

7. MESH INTERCOM

What is Mesh Intercom?

Starting Mesh Intercom

Using the Mesh in Open Mesh

Using Mesh in Group Mesh

Reset Mesh

Toggling Open Mesh/Group Mesh


Enable/ Disable Mic (Default: Enable)

7.4 Using Mesh in Group Mesh


7.4.1 Creating a Group Mesh

Creating a **Group Mesh** requires **two or more Open Mesh users**.

Open Mesh

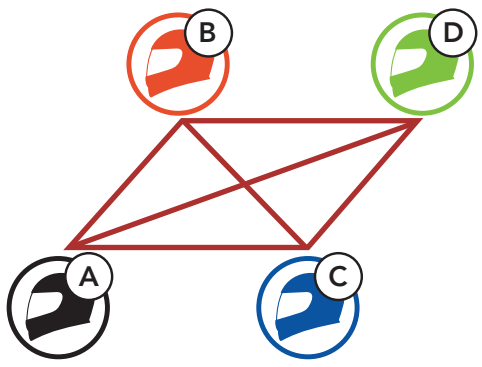

1. Enter into **Mesh Grouping** to create a **Group Mesh**.

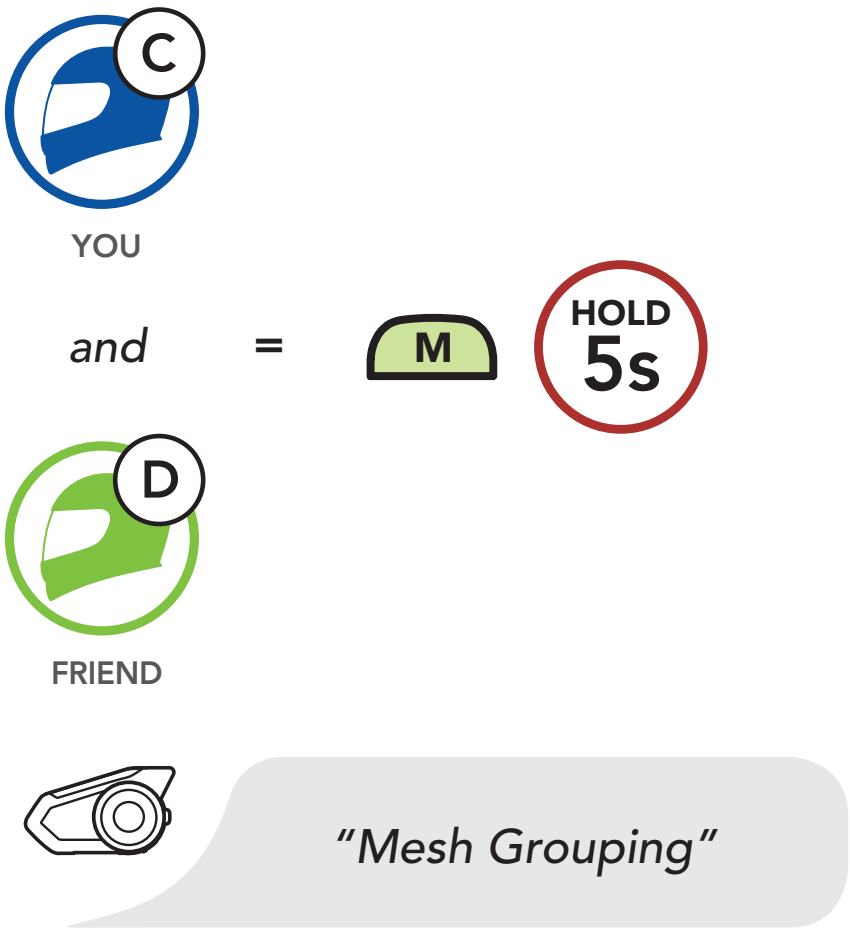

7. MESH INTERCOM

What is Mesh Intercom?

Starting Mesh Intercom

Using the Mesh in Open Mesh

Using Mesh in Group Mesh

Reset Mesh


Toggling Open Mesh/Group Mesh

Enable/ Disable Mic (Default: Enable)

2. The headsets complete **Mesh Grouping** and automatically switch from **Open Mesh** to **Group Mesh**.

"Group Mesh"

Open Mesh **Group Mesh**

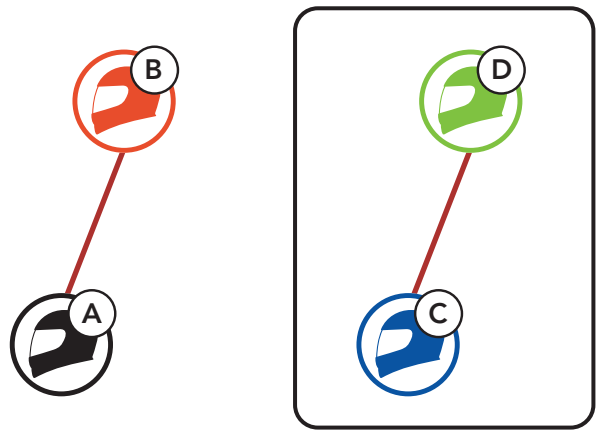


Note:

- If the **Mesh Grouping** is not completed within **30 seconds**, users will hear a voice prompt, **"Grouping failed"**.
- If you want to cancel during the **Mesh Grouping**, tap the **Mesh Intercom Button** or **Phone Button**.

7.4.2 Joining an Existing Group Mesh

One of the members in an **Existing Group Mesh** can allow new members in **Open Mesh** to join the **Existing Group Mesh**.

New Members **Existing Group Mesh and Current Members**

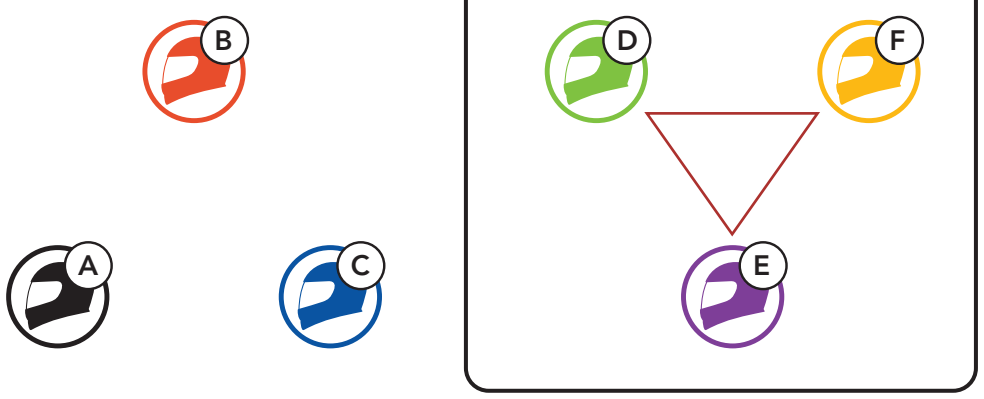

7. MESH INTERCOM

What is Mesh Intercom?

Starting Mesh Intercom

Using the Mesh in Open Mesh


Using Mesh in Group Mesh


Reset Mesh

Toggling Open Mesh/Group Mesh

Enable/ Disable Mic (Default: Enable)


1. **One of the current members** and a **new member** enter into **Mesh Grouping** to join the **Existing Group Mesh**.

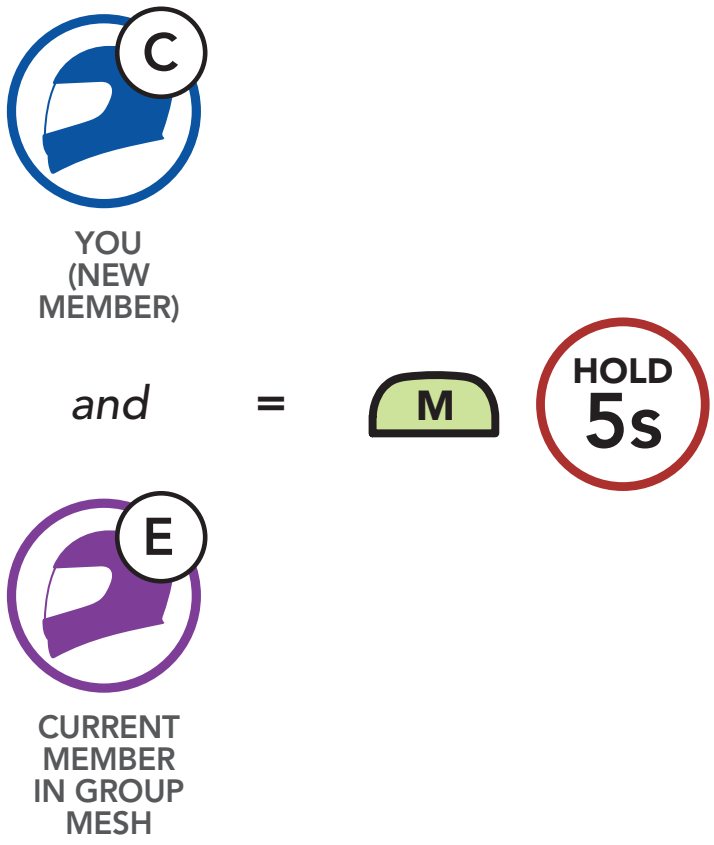




"Mesh Grouping"

2. The headsets complete **Mesh Grouping**. The new members will hear a voice prompt as their headsets automatically switch from **Open Mesh** to **Group Mesh**.



"Group Mesh"

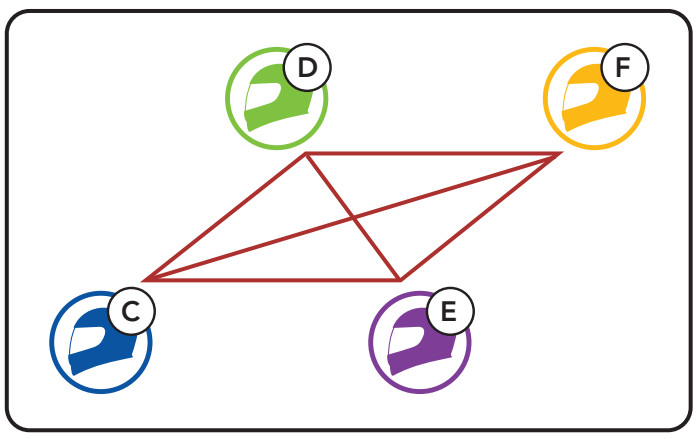

7. MESH INTERCOM

What is Mesh Intercom?

Starting Mesh Intercom

Using the Mesh in Open Mesh

Using Mesh in Group Mesh

Reset Mesh


Toggling Open Mesh/Group Mesh

Enable/ Disable Mic (Default: Enable)

Note: If the **Mesh Grouping** is not completed within **30 seconds**, the current members will hear a low tone double beep and the new member will hear a voice prompt, **"Grouping failed"**.

7.5 Reset Mesh

If a headset in an **Open Mesh** or **Group Mesh** resets the **Mesh**, it will automatically return to **Open Mesh (default: channel 1)**.

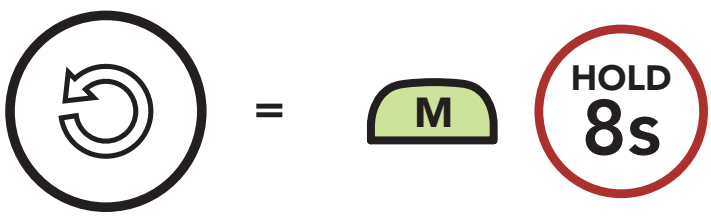


7.6 Toggling Open Mesh/Group Mesh

Users are able to toggle between **Open Mesh** and **Group Mesh** without resetting the **Mesh**. This allows users to keep the **Group Mesh Network** connection information while in **Open Mesh**.

Users can toggle to **Group Mesh** to communicate with participants from the stored **Group Mesh Network** connection information.

Toggle Between Open Mesh and Group Mesh

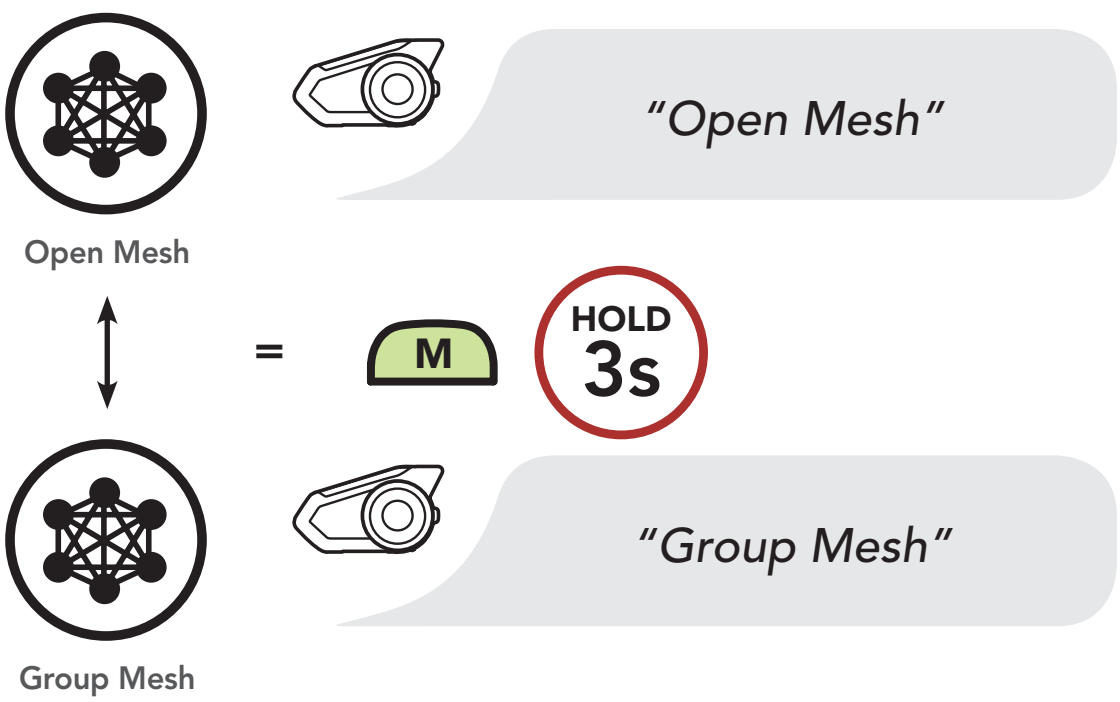

7. MESH INTERCOM

What is Mesh Intercom?

Starting Mesh Intercom

Using the Mesh in Open Mesh

Using Mesh in Group Mesh

Reset Mesh

Toggling Open Mesh/Group Mesh


Enable/ Disable Mic (Default: Enable)

Note: If you have never participated in **Group Mesh**, you cannot toggle between **Open Mesh** and **Group Mesh**. You will hear a voice prompt, **"No Group Available"**.

7.7 Enable/Disable Mic (Default: Enable)

Users can enable/disable the microphone when communicating in a **Mesh Intercom**.

Enable/Disable the Microphone

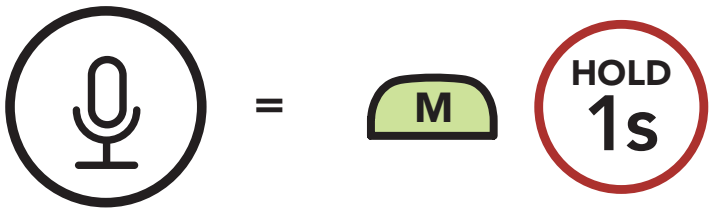


8. BLUETOOTH INTERCOM SETUP

Intercom Pairing
Two-Way Intercom
Multi-Way Intercom
Three-Way Conference Phone Call with Intercom Users
Group Intercom
Mesh Intercom
Conference with Bluetooth Intercom Participant
Universal Intercom
VOX Intercom
Intercom VOX Sensitivity
HD Intercom
Advanced Noise Control™

8.1 Intercom Pairing


Up to three people can communicate via intercom with the headset simply by pairing their headsets.

Pairing with Intercom Friends

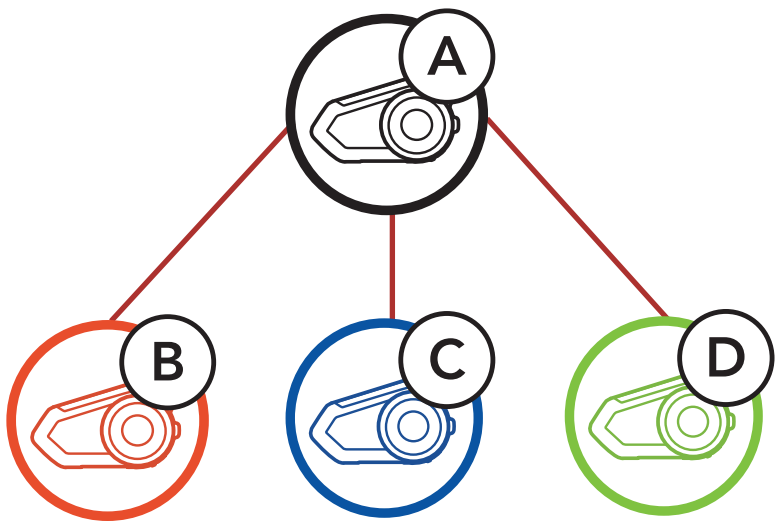

1. Press and hold the **Jog Dials** of two headsets for **5 seconds** until you hear the voice prompt, "**Intercom pairing**".

Pairing Headset A with Headset B

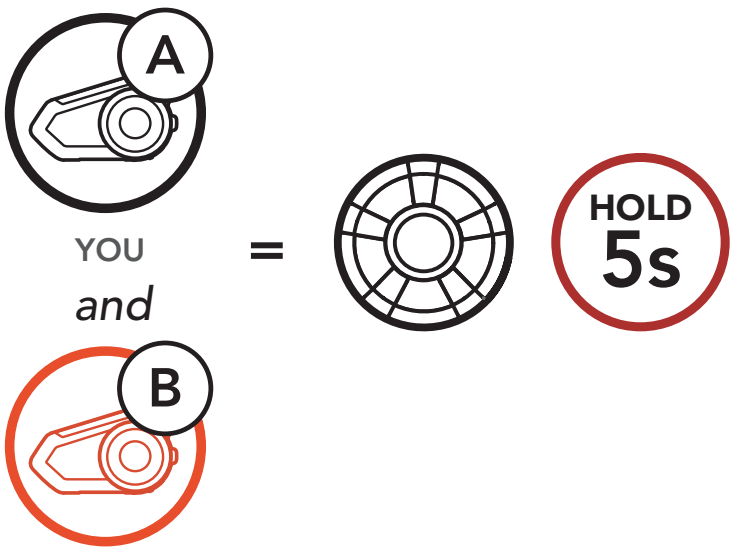


MENU

8. BLUETOOTH INTERCOM SETUP

- Intercom Pairing
- Two-Way Intercom
- Multi-Way Intercom
- Three-Way Conference Phone Call with Intercom Users
- Group Intercom
- Mesh Intercom
- Conference with Bluetooth Intercom Participant
- Universal Intercom
- VOX Intercom
- Intercom VOX Sensitivity
- HD Intercom
- Advanced Noise Control™

2. Tap the **Jog Dial** on either headset and wait until the LEDs of both turn blue.

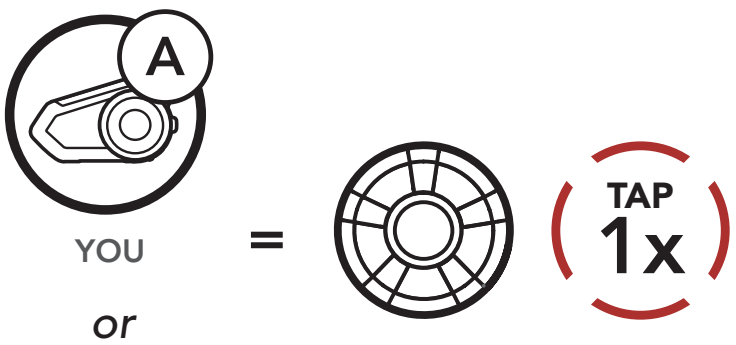

8. BLUETOOTH INTERCOM SETUP

Intercom Pairing

Two-Way Intercom

Multi-Way Intercom

Three-Way Conference Phone Call with Intercom Users

Group Intercom

Mesh Intercom Conference with Bluetooth Intercom Participant

Universal Intercom

VOX Intercom


Intercom VOX Sensitivity

HD Intercom


Advanced Noise Control™

3. Repeat steps 1 and 2 to pair with **Intercom Friends** C & D.


Last-Come, First-Served

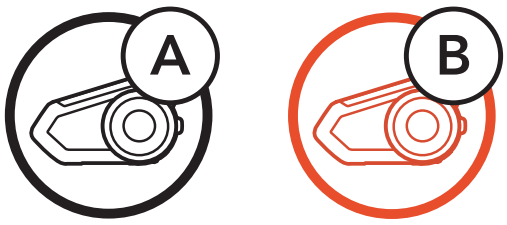

YOU — Intercom Friend 1

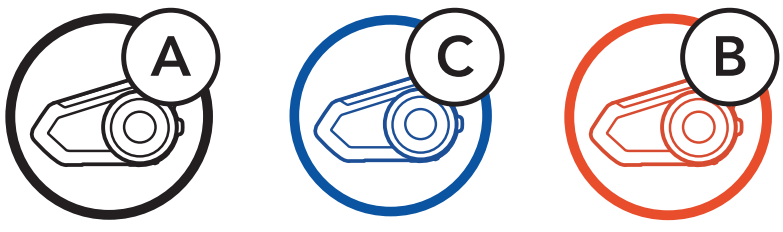

YOU — Intercom Friend 1 — Intercom Friend 2

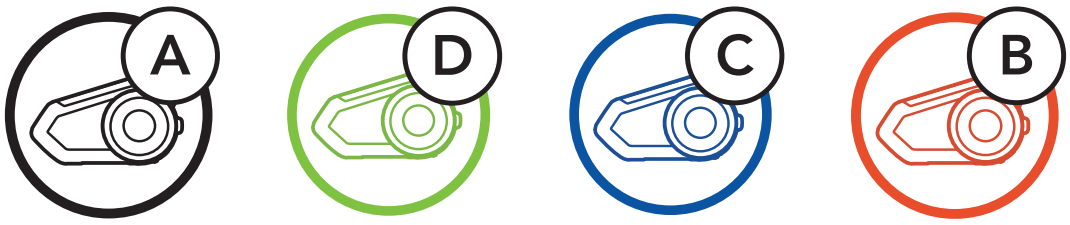

YOU — Intercom Friend 1 — Intercom Friend 2 — Intercom Friend 3

8. BLUETOOTH INTERCOM SETUP

Intercom Pairing

Two-Way Intercom

Multi-Way Intercom

Three-Way Conference Phone Call with Intercom Users

Group Intercom

Mesh Intercom Conference with Bluetooth Intercom Participant

Universal Intercom

VOX Intercom

Intercom VOX Sensitivity

HD Intercom


Advanced Noise Control™

8.2 Two-Way Intercom

You can start or end an intercom conversation with an Intercom Friend by tapping the **Jog Dial**.


1. Tap once for Intercom **Friend 1.**

Start/End with Intercom Friend 1

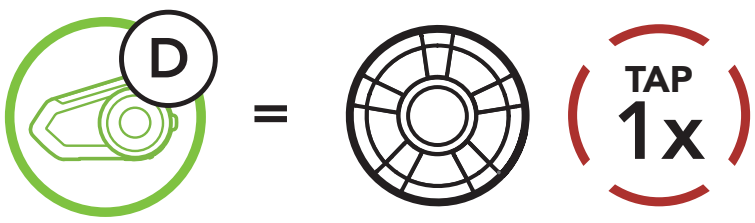


2. Tap twice for Intercom **Friend 2.**

Start/End with Intercom Friend 2

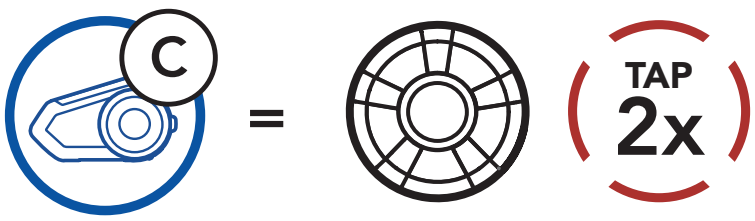

3. Tap three times for Intercom **Friend 3.**

Start/End with Intercom Friend 3

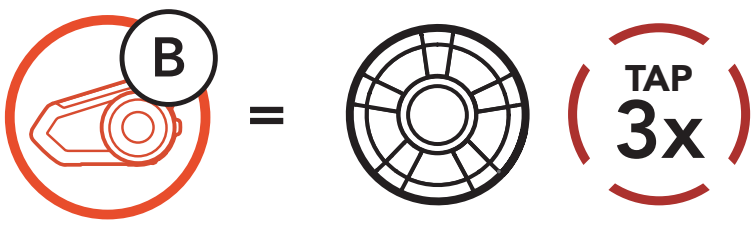

8. BLUETOOTH INTERCOM SETUP

Intercom Pairing
Two-Way Intercom
Multi-Way Intercom
Three-Way Conference Phone Call with Intercom Users
Group Intercom
Mesh Intercom Conference
with Bluetooth Intercom Participant
Universal Intercom
VOX Intercom
Intercom VOX Sensitivity
HD Intercom
Advanced Noise Control™

8.3 Multi-Way Intercom


Multi-Way Intercom enables conference-call-style conversations with up to three **Intercom Friends** at the same time. While **Multi-Way Intercom** is in progress, mobile phone connection is temporarily disconnected. However, as soon as **Multi-Way Intercom** terminates, the mobile phone connection will be reestablished.

8.3.1 Starting a Three-Way Intercom Conference

You (A) can have a **Three-Way Intercom Conference** with two other **Intercom Friends (B & C)** by establishing two intercom connections simultaneously.

1. Pair your headset (A) with those of two other **Intercom Friends (B & C)**. Please refer to **Section 8.1: "Intercom Pairing"** for pairing instructions.

Pair with Intercom Friends B & C

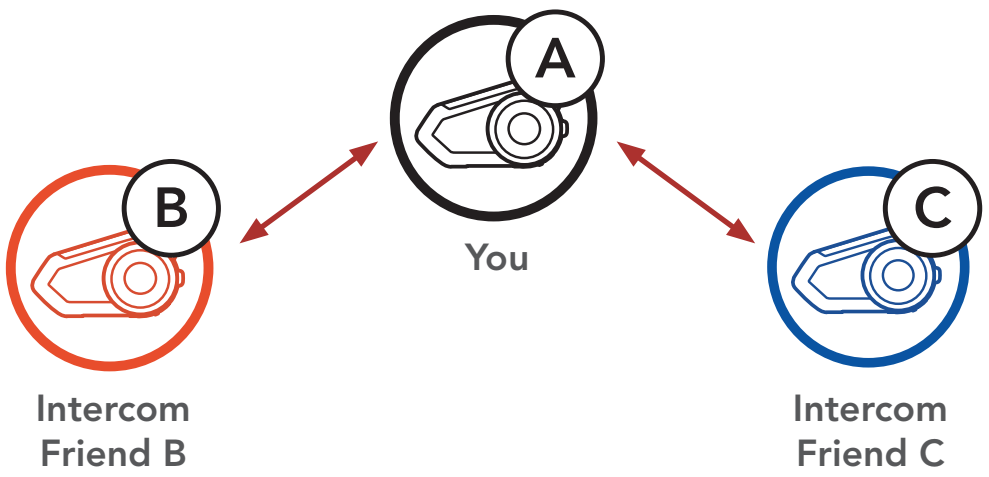

8. BLUETOOTH INTERCOM SETUP

Intercom Pairing

Two-Way Intercom

Multi-Way Intercom

Three-Way Conference Phone Call with Intercom Users

Group Intercom

Mesh Intercom Conference with Bluetooth Intercom Participant

Universal Intercom

VOX Intercom


Intercom VOX Sensitivity

HD Intercom

Advanced Noise Control™


2. Start an intercom conversation with one of the two friends in your intercom group. For example, **you (A)** may start an intercom conversation with the **Intercom Friend (B)**. Or, **Intercom Friend (B)** may start an intercom call with **you (A)**.

Starting an Intercom Conversation with Intercom Friend B

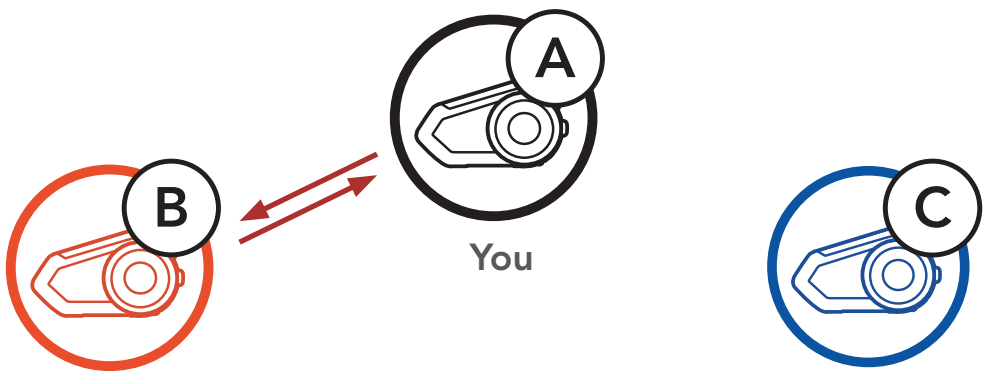

3. Then, **you (A)** can call the second **Intercom Friend (C)**, or the second **Intercom Friend (C)** may join the intercom by making an intercom call to **you (A)**.

Starting an Intercom Conversation with Intercom Friend C

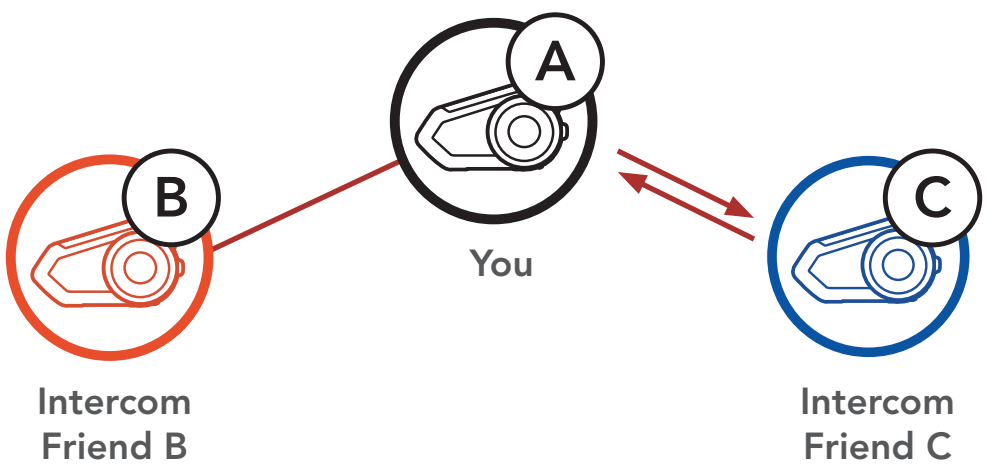


8. BLUETOOTH INTERCOM SETUP

Intercom Pairing
Two-Way Intercom
Multi-Way Intercom
Three-Way Conference Phone Call with Intercom Users
Group Intercom
Mesh Intercom Conference with Bluetooth Intercom Participant
Universal Intercom
VOX Intercom
Intercom VOX Sensitivity
HD Intercom
Advanced Noise Control™

4. Now **you (A)** and two **Intercom Friends (B & C)** are having a **Three-Way Intercom Conference**.


Three-Way Intercom

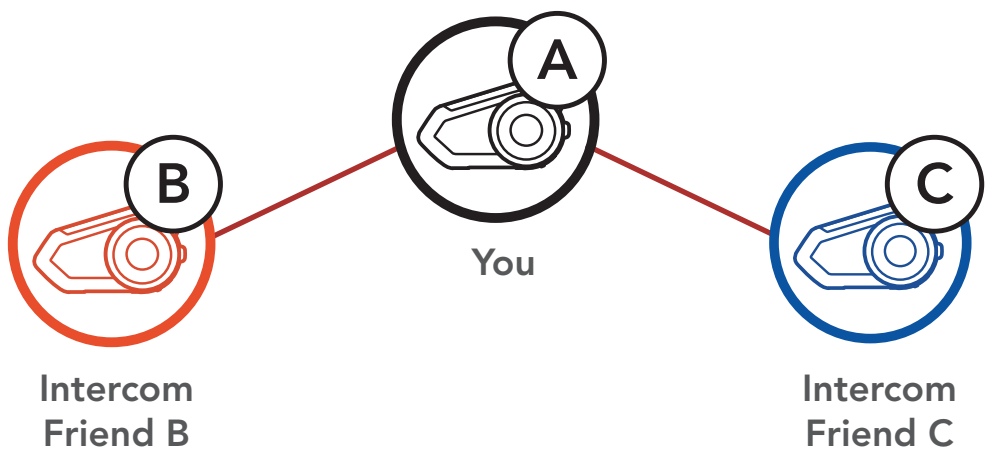

8.3.2 Starting a Four-Way Intercom Conference

With three **Intercom Friends** connected, a new participant **(D)** can make it a **Four-Way Intercom Conference** by making an intercom call to either **(B)** or **(C)**.

Starting a Four-Way Intercom

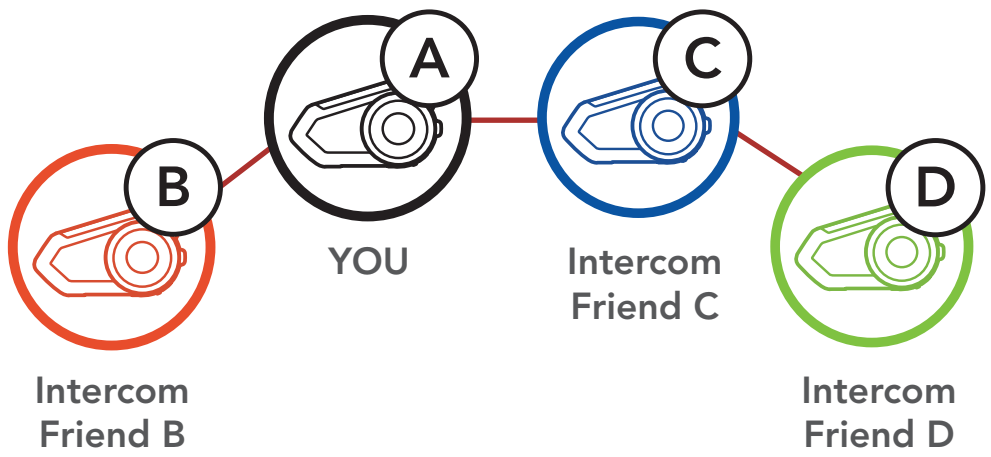

8. BLUETOOTH INTERCOM SETUP

Intercom Pairing
Two-Way Intercom
Multi-Way Intercom
Three-Way Conference Phone Call with Intercom Users
Group Intercom
Mesh Intercom Conference with Bluetooth Intercom Participant
Universal Intercom
VOX Intercom
Intercom VOX Sensitivity
HD Intercom
Advanced Noise Control™

8.3.3 Ending Multi-Way Intercom


1. Press the **Jog Dial** for **1 second** until you hear a beep to terminate all intercom connections.
2. Tap the **Jog Dial** to disconnect from your first **Intercom Friend**. Double tap the **Jog Dial** to disconnect from your second **Intercom Friend**.

8.4 Three-Way Conference Phone Call with Intercom Users

You can have a **Three-Way Conference Phone Call** by adding an **Intercom Friend** to the mobile phone conversation.

1. During a mobile phone call, tap the **Jog Dial once, twice or, three times** to invite one of your **Intercom Friends** to the conversation.

Invite an Intercom Friend into Phone Conference

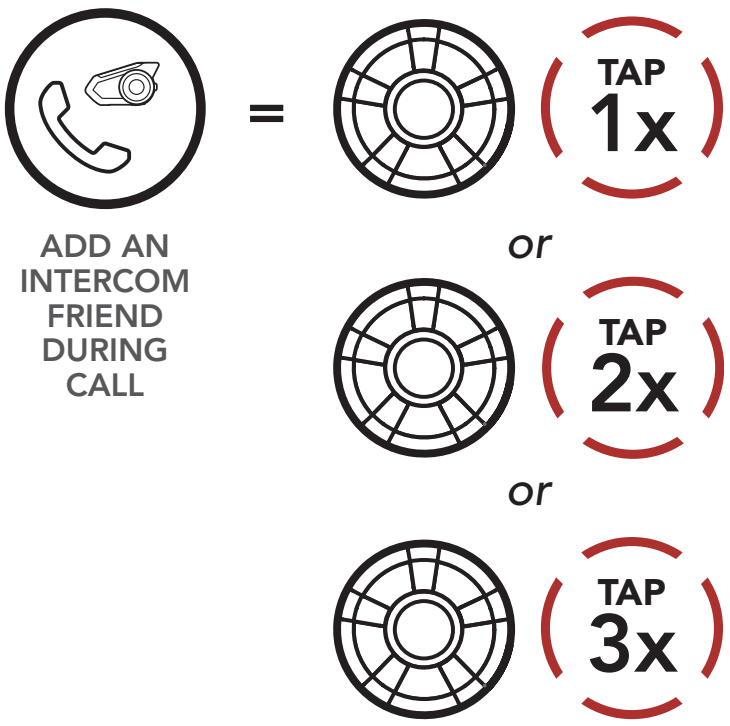


8. BLUETOOTH INTERCOM SETUP

Intercom Pairing
Two-Way Intercom
Multi-Way Intercom
Three-Way Conference Phone Call with Intercom Users
Group Intercom
Mesh Intercom
Conference with Bluetooth Intercom Participant
Universal Intercom
VOX Intercom
Intercom VOX Sensitivity
HD Intercom
Advanced Noise Control™


2. To disconnect the intercom during a conference phone call, tap the **Jog Dial once, twice or three times**.

Disconnect Intercom Friend from Conference

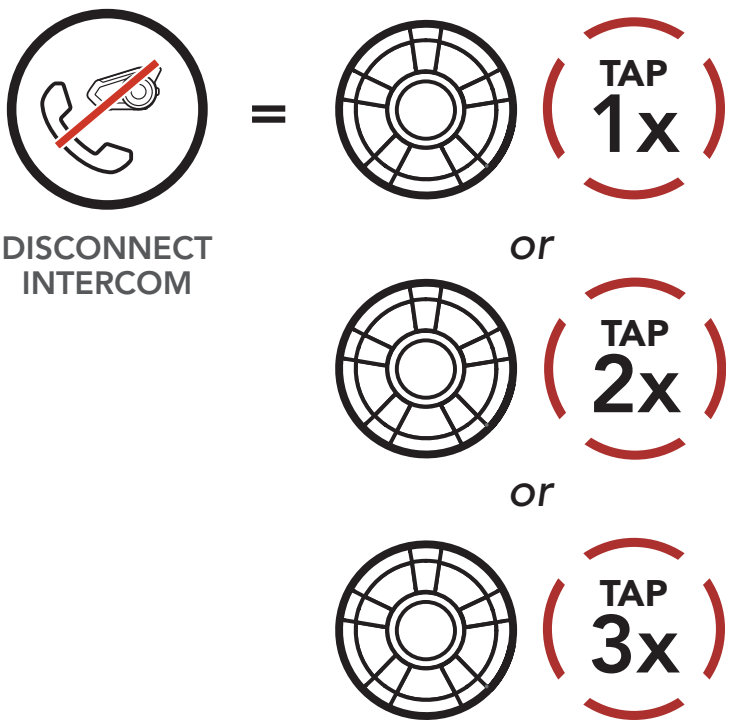

3. To disconnect the mobile phone call during a conference phone call, tap the **Phone Button**.

End Phone Call from Conference

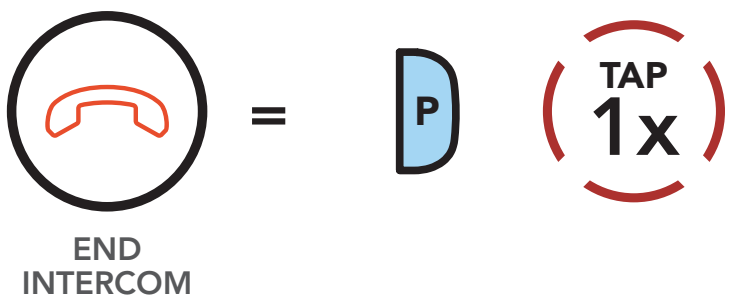

Note: When you have an incoming intercom call during a mobile phone call, you will hear high tone double beeps.

8. BLUETOOTH INTERCOM SETUP


Intercom Pairing
Two-Way Intercom
Multi-Way Intercom
Three-Way Conference Phone Call with Intercom Users
Group Intercom
Mesh Intercom Conference with Bluetooth Intercom Participant
Universal Intercom
VOX Intercom
Intercom VOX Sensitivity
HD Intercom
Advanced Noise Control™

8.5 Group Intercom


Group Intercom allows you to instantly create a **Multi-Way Conference Intercom** with three of the most recently paired headsets.

1. Go through intercom pairing with up to three headsets you want to have **Group Intercom** with.
2. Press the **Ambient Mode Button** for **1 second** to begin **Group Intercom**. The LED will flash green and you will hear a voice prompt, "**Group intercom**".

Start Group Intercom

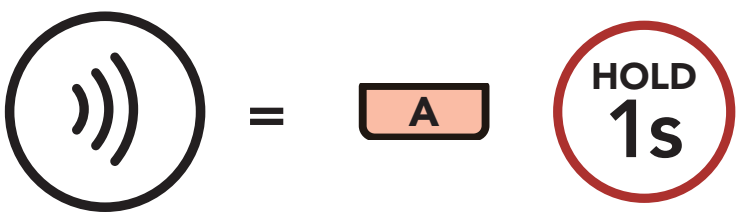

3. When all of the headsets are connected together, everyone will hear the voice prompt, "**Group intercom connected**."

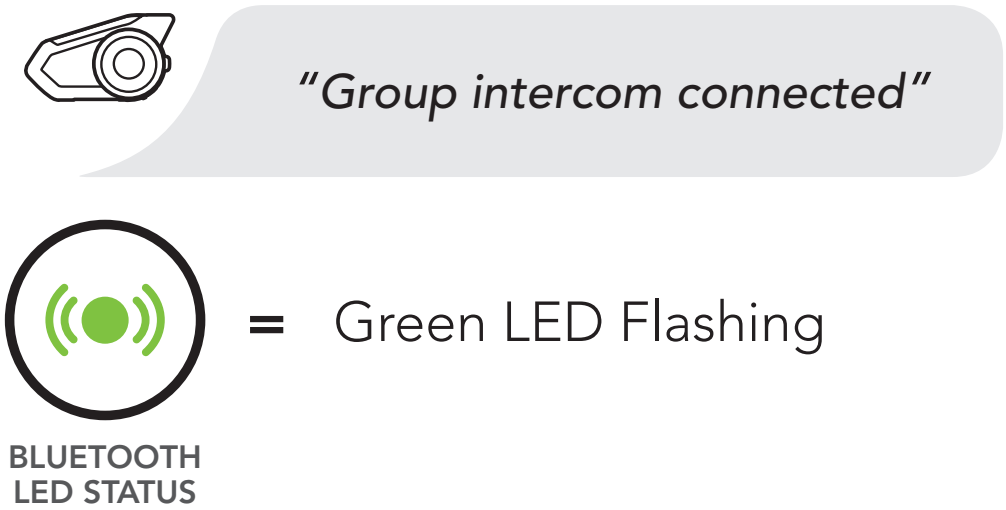


8. BLUETOOTH INTERCOM SETUP

Intercom Pairing
Two-Way Intercom
Multi-Way Intercom
Three-Way Conference Phone Call with Intercom Users
Group Intercom
Mesh Intercom Conference with Bluetooth Intercom Participant
Universal Intercom
VOX Intercom
Intercom VOX Sensitivity
HD Intercom
Advanced Noise Control™

4. To terminate **Group Intercom**, press the **Ambient Mode Button** for **1 second** during **Group Intercom**. You will hear a voice prompt, "**Group intercom terminated**".

End Group Intercom

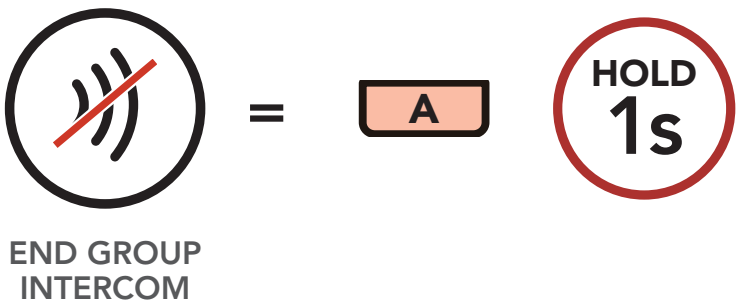

8.6 Mesh Intercom Conference with Bluetooth Intercom Participant

Users can use the existing Bluetooth intercom and **Mesh Intercom** function at the same time. In this case, it is recommended to communicate with other Sena headsets via Bluetooth intercom connection and use **Mesh Intercom** between 30K headsets. A user who is in **Open Mesh** or **Group Mesh** when using **Mesh Intercom** is able to include up to 3 of their Bluetooth intercom friends. You can start a Two-Way Intercom conversation with one of your three Intercom Friends to include them in the Mesh. Please refer to **Section 8.2: "Two-Way Intercom"** for more details. Or, you can use "Group Intercom" to include all of your Bluetooth intercom friends in the Mesh. Please refer to **Section 8.5: "Group Intercom"** for more details.

8. BLUETOOTH INTERCOM SETUP

Intercom Pairing

Two-Way Intercom

Multi-Way Intercom

Three-Way Conference Phone Call with Intercom Users

Group Intercom

Mesh Intercom Conference with Bluetooth Intercom Participant

Universal Intercom

VOX Intercom


Intercom VOX Sensitivity

HD Intercom

Advanced Noise Control™

Note:

- The audio quality will be reduced if a **30K** connects to 2 or more Bluetooth intercom friends while in **Open Mesh** or **Group Mesh** when using **Mesh Intercom**.
- If a closed loop is created, as shown below, each user will experience severe noise issues. Sena recommends that a closed loop not be created.

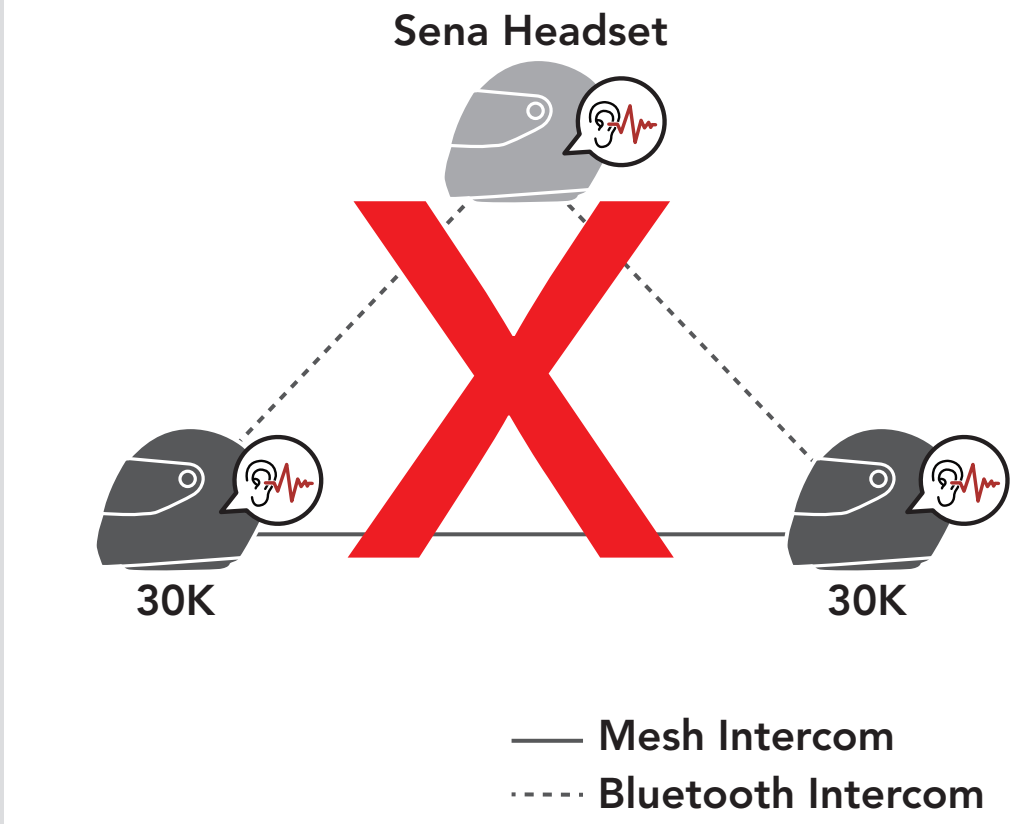

8. BLUETOOTH INTERCOM SETUP

Intercom Pairing

Two-Way Intercom

Multi-Way Intercom

Three-Way Conference Phone Call with Intercom Users

Group Intercom

Mesh Intercom Conference with Bluetooth Intercom Participant

Universal Intercom


VOX Intercom

Intercom VOX Sensitivity

HD Intercom

Advanced Noise Control™

- If **Bluetooth intercom** is accidentally turned on during **Mesh Intercom** communication between **30K** headsets, as shown below, you will hear a voice prompt, **"Mesh intercom disabled, Bluetooth intercom connected"** every **1 minute**. If you turn off the Bluetooth Intercom or turn off the **Mesh Intercom**, the voice prompt will no longer come out.

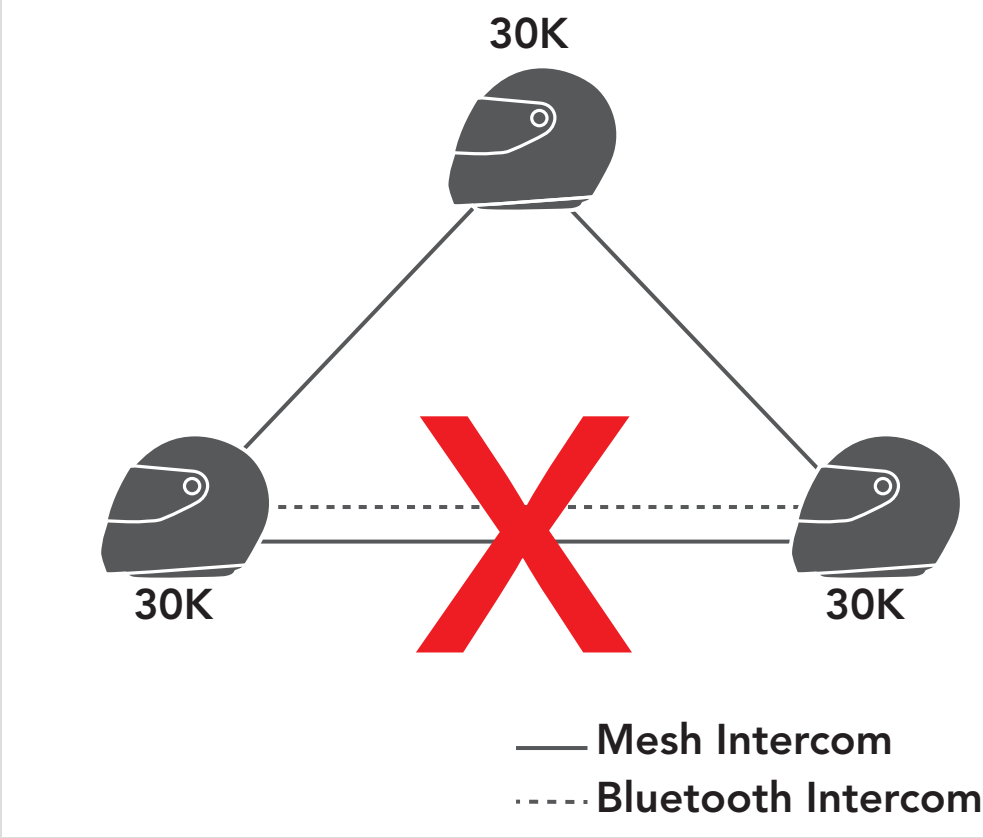

8.7 Universal Intercom


Universal Intercom allows you to have intercom conversations with users of non-Sena Bluetooth headsets. You can pair your headset with only one non-Sena headset at a time. The intercom distance depends on the performance of the Bluetooth headset to which it's connected. When a non-Sena Bluetooth headset is paired with the Sena headset, if another Bluetooth device is paired via **Second Mobile Phone Pairing**, it will be disconnected.

1. Execute **Universal Intercom** in the **Headset Configuration Menu**.


8. BLUETOOTH INTERCOM SETUP

Intercom Pairing
Two-Way Intercom
Multi-Way Intercom
Three-Way Conference Phone Call with Intercom Users
Group Intercom
Mesh Intercom
Conference with Bluetooth Intercom Participant
Universal Intercom
VOX Intercom
Intercom VOX Sensitivity
HD Intercom
Advanced Noise Control™


Access Universal Intercom in the Configuration Menu

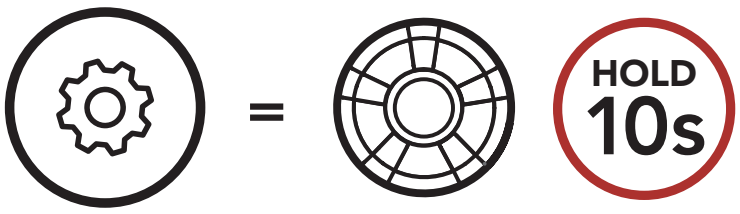


ACCESS CONFIG. MENU




"Configuration menu"

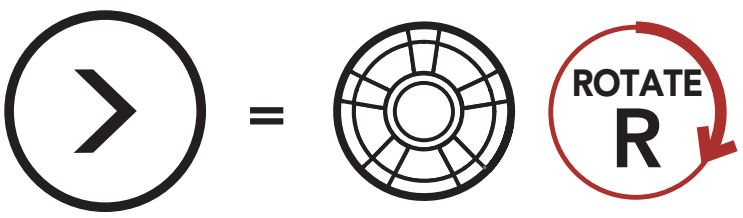

NAVIGATE FORWARD



"Universal intercom pairing"

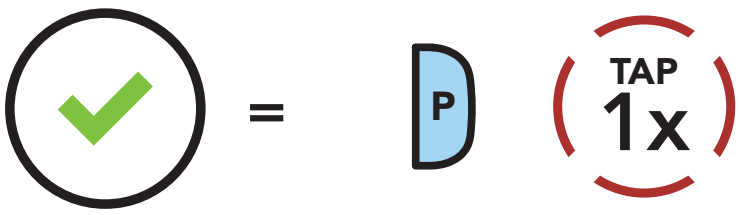

EXECUTE

2. Put the non-Sena Bluetooth headset in Pairing Mode. The headset will automatically pair with a non-Sena Bluetooth headset.

8. BLUETOOTH INTERCOM SETUP

Intercom Pairing

Two-Way Intercom

Multi-Way Intercom

Three-Way Conference Phone Call with Intercom Users

Group Intercom

Mesh Intercom Conference with Bluetooth Intercom Participant

Universal Intercom

VOX Intercom


Intercom VOX Sensitivity

HD Intercom


Advanced Noise Control™

3. You can have **Two-Way Intercom** or **Multi-Way Intercom** communication with up to three **Intercom Friends** using non-Sena headsets by following the procedures described below.

Example of a Three-Way Universal Intercom

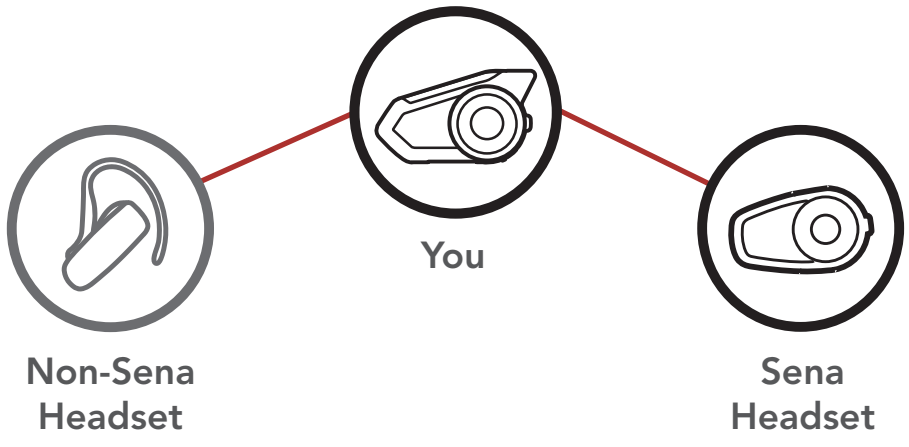

Example of a Four-Way Universal Intercom

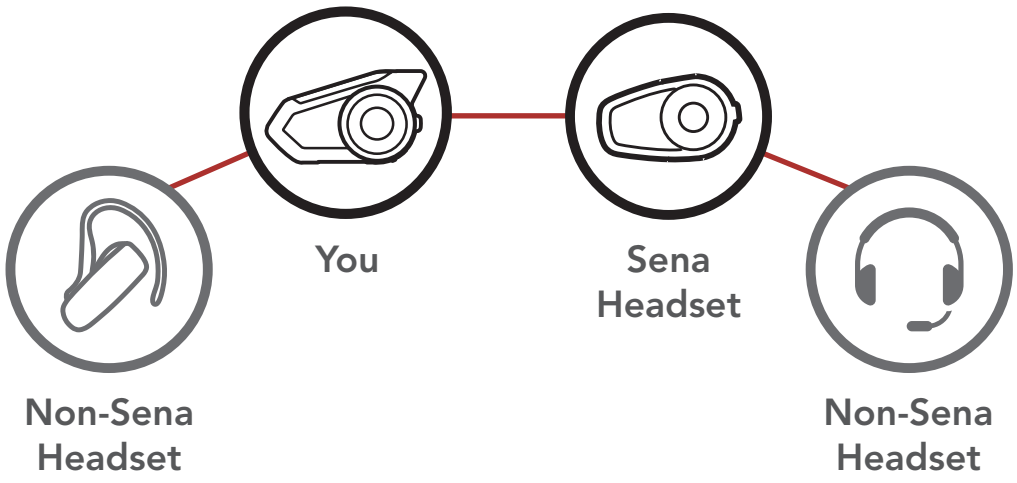

8. BLUETOOTH INTERCOM SETUP

Intercom Pairing

Two-Way Intercom

Multi-Way Intercom

Three-Way Conference Phone Call with Intercom Users

Group Intercom

Mesh Intercom Conference with Bluetooth Intercom Participant

Universal Intercom

VOX Intercom

Intercom VOX Sensitivity

HD Intercom

Advanced Noise Control™

8.8 VOX Intercom (Default: Disable)

The **VOX Intercom** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.

If **VOX Intercom** is enabled, you can initiate an intercom conversation with the last connected intercom friend by voice. When you want to start intercom, say a word such as **"Hello"** loudly or blow air into the microphone. If you start an intercom conversation by voice, the intercom terminates automatically when you and your intercom friend remain silent for 20 seconds. However, if you manually start an intercom conversation by tapping the **Jog Dial**, you have to terminate the intercom conversation manually.

However, if you start the intercom by voice and end it manually by tapping the **Jog Dial**, you will not be able to start intercom by voice temporarily. In this case, you have to tap the **Jog Dial** to restart the intercom. This is to prevent repeated unintentional intercom connections by strong wind noise. After rebooting the headset, you can start the intercom by voice again.

8. BLUETOOTH INTERCOM SETUP

Intercom Pairing
Two-Way Intercom
Multi-Way Intercom
Three-Way Conference Phone Call with Intercom Users
Group Intercom
Mesh Intercom Conference with Bluetooth Intercom Participant
Universal Intercom
VOX Intercom
Intercom VOX Sensitivity
HD Intercom
Advanced Noise Control™

8.9 Intercom VOX Sensitivity (Default: 3)

The **Intercom VOX Sensitivity** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.

The sensitivity can be adjusted depending on your riding environment. Level 5 is the highest sensitivity setting and 1 is the lowest.

8.10 HD Intercom (Default: Enable)

The **HD Intercom** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.

HD Intercom enhances the two-way intercom audio from normal quality to HD quality. **HD Intercom** will become temporarily disabled when you enter into a multi-way intercom. If this feature is disabled, the two-way intercom audio will change to normal quality.

Note: The intercom distance of **HD Intercom** is relatively shorter than that of normal intercom.

8.11 Advanced Noise Control™ (Default: Enable)

The **Advanced Noise Control** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.

If **Advanced Noise Control** is enabled, background noise is reduced during intercom conversations.

If **Advanced Noise Control** is disabled, the background noise is mixed with your voice while using the intercom.

9. AUDIO MULTITASKING

Audio Multitasking Settings

Intercom-Audio Overlay Sensitivity

Audio Overlay Volume Management

Audio Multitasking allows you to have an intercom conversation while simultaneously listening to music, FM radio, or GPS instructions. The overlaid audio is played in the background with reduced volume whenever there is an intercom conversation and will return to normal volume once the conversation is finished. The Audio Multitasking feature can be configured through the **Intercom-Audio Overlay Sensitivity** and the **Audio Overlay Volume Management** settings.

9.1 Audio Multitasking Settings

The Mesh Intercom Audio Multitasking feature is always on. The **Bluetooth Intercom Audio Multitasking (Default: Disabled)** setting can be found in the settings menu, accessible through the **Sena Device Manager** or the **Sena 30K Utility App**.

Note:

1. **Bluetooth Intercom Audio Multitasking** will be activated during two-way intercom conversations with a headset that also supports this feature.
2. HD Intercom will become disabled temporarily when **Bluetooth Intercom Audio Multitasking** is enabled.
3. For **Bluetooth Intercom Audio Multitasking** to work properly, you need to power the headset off and on. Please restart the headset.
4. Some GPS devices may not support this feature.

9. AUDIO MULTITASKING

Audio Multitasking Settings

Intercom-Audio Overlay Sensitivity

Audio Overlay Volume Management

9.2 Intercom-Audio Overlay Sensitivity (Default: 3)

The **Intercom-Audio Overlay Sensitivity** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**. The music, FM radio and GPS volume will be lowered to play in the background if you talk over the intercom while the overlaid audio is playing. You can adjust the intercom sensitivity to activate this background audio mode. Level 1 has the lowest sensitivity and level 5 has the highest sensitivity.

Note: If your voice is not louder than the sensitivity of the selected level, the overlaid audio will not be lowered.

9.3 Audio Overlay Volume Management (Default: Disable)

The **Audio Overlay Volume Management** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**. The music, FM radio and GPS overlaid audio reduces in volume whenever there is an ongoing intercom conversation. If **Audio Overlay Volume Management** is enabled, the volume level of the overlaid audio will not be reduced during intercom conversation.

10. USING THE FM RADIO

FM Radio On/Off

Seek and Save Radio Stations

Scan and Save Radio Stations

Temporary Station Preset

Navigating Preset Stations

Region Selection


Radio Data System (RDS) Alternative Frequency (AF) Setting

FM Station Guide


10.1 FM Radio On/Off

To turn on or shut off the FM radio, press the **Phone Button** for **1 second** until you hear a double beep.

FM Radio On

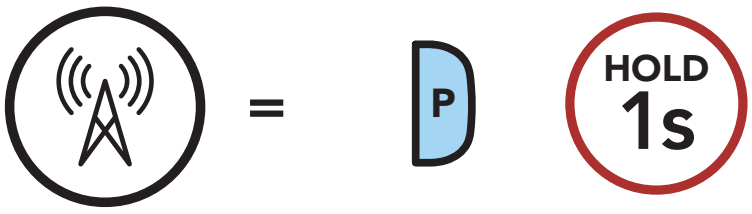


FM RADIO ON




"FM on"

FM Radio Off

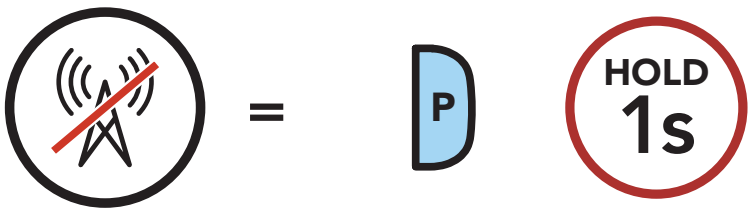

FM RADIO OFF



"FM off"

10. USING THE FM RADIO


FM Radio On/Off
Seek and Save Radio Stations
Scan and Save Radio Stations
Temporary Station Preset
Navigating Preset Stations
Region Selection
Radio Data System (RDS) Alternative Frequency (AF) Setting
FM Station Guide

10.2 Seek and Save Radio Stations


The **"Seek"** feature searches for radio stations.

1. Rotate while pressing the **Jog Dial** clockwise or counterclockwise to search for radio stations.

Seek Stations Forward

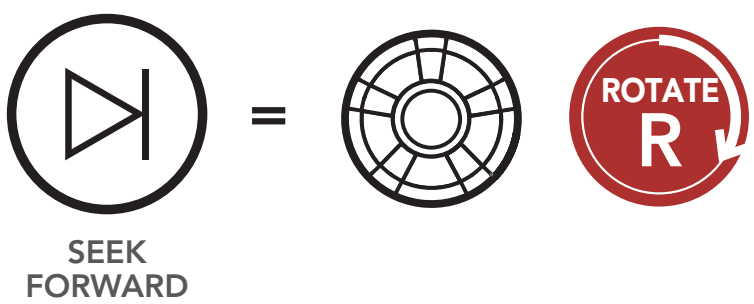



Seek Stations Backward

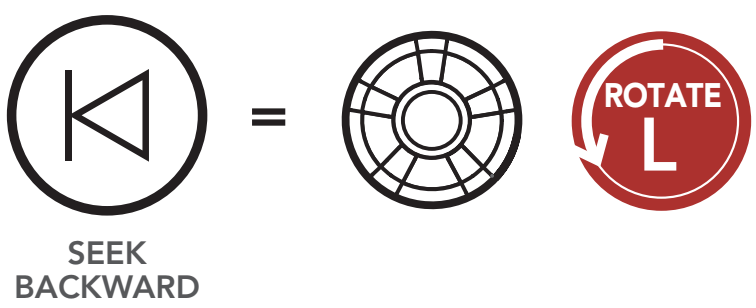

2. To save the current station, press and hold the **Jog Dial** for **1 seconds** until you hear the voice prompt, **"Preset (#)."**

Enter Preset Selection Mode

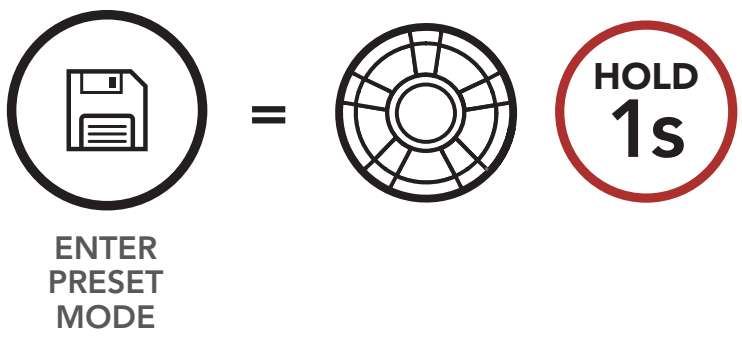

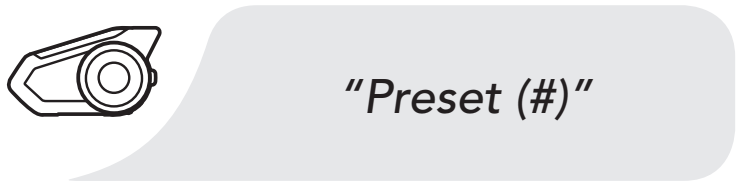

10. USING THE FM RADIO

FM Radio On/Off

Seek and Save Radio Stations

Scan and Save Radio Stations

Temporary Station Preset

Navigating Preset Stations


Region Selection

Radio Data System (RDS) Alternative Frequency (AF) Setting


FM Station Guide

3. Rotate the **Jog Dial** to navigate through the preset numbers that you want to store.

Navigate Forward through Preset Stations

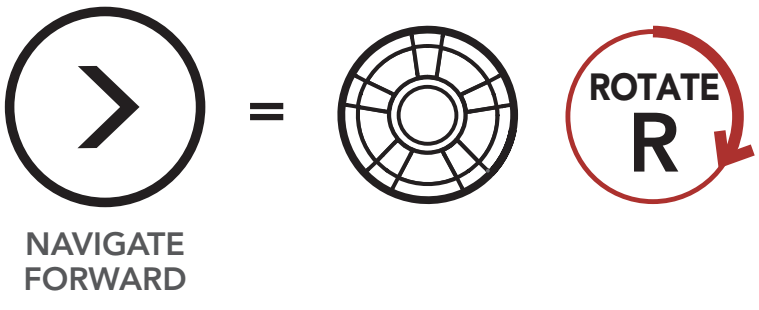


Navigate Backward through Preset Stations

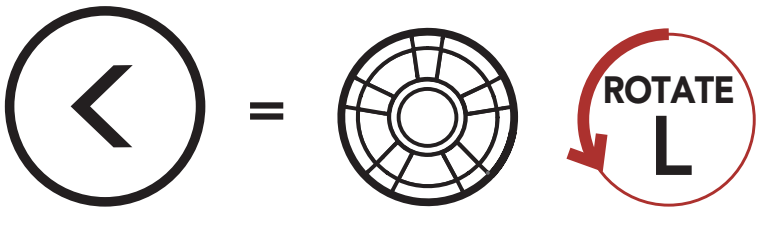


4. Tap the **Jog Dial** to save the station in the preset number you choose. Or, tap the **Phone Button** to delete the station from memory.

Save Station to the Preset Number

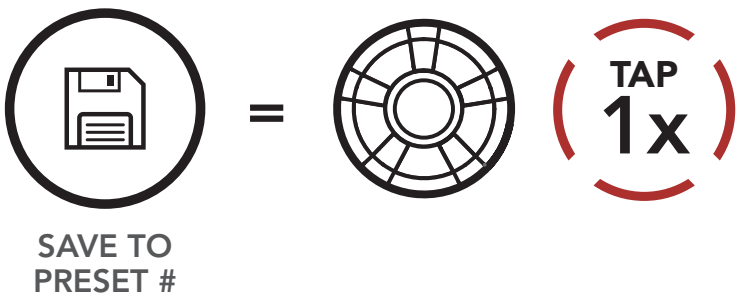

Delete Station from Memory

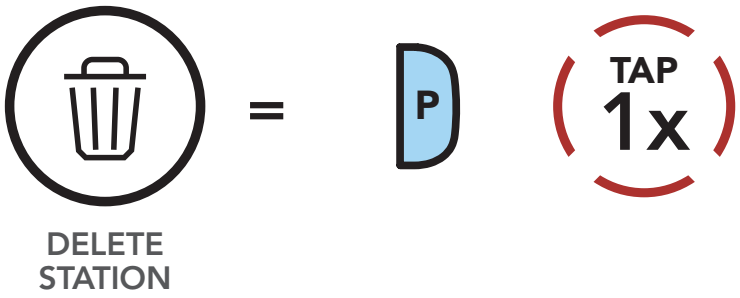

10. USING THE FM RADIO


FM Radio On/Off
Seek and Save Radio Stations
Scan and Save Radio Stations
Temporary Station Preset
Navigating Preset Stations
Region Selection
Radio Data System (RDS) Alternative Frequency (AF) Setting
FM Station Guide

10.3 Scan and Save Radio Stations

The **"Scan"** function automatically searches for radio stations, starting with the current station's frequency, then up from there.

1. Double tap the **Phone Button** to scan for stations.

Scan and Save Radio Stations

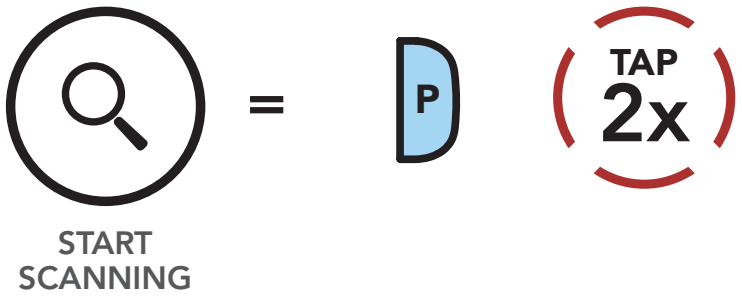

2. The Sena tuner pauses at each station it finds for **8 seconds** before moving to the next.
3. To save the current station, tap the **Phone Button**. The station will be saved as the next preset number.

Save the Current Station




10. USING THE FM RADIO

FM Radio On/Off
Seek and Save Radio Stations
Scan and Save Radio Stations
Temporary Station Preset
Navigating Preset Stations
Region Selection
Radio Data System (RDS) Alternative Frequency (AF) Setting
FM Station Guide

4. To stop scanning, double tap the **Phone Button**.

Stop Scanning

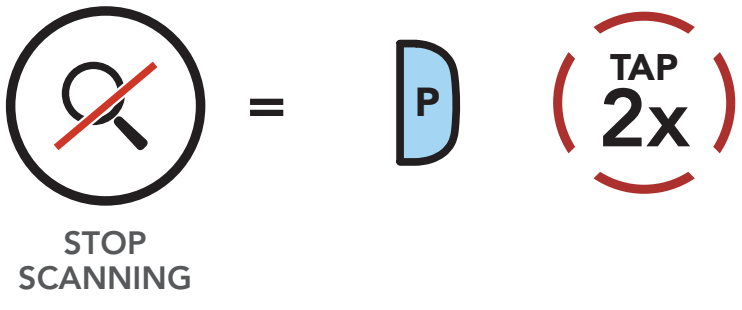


10.4 Temporary Station Preset

The **Temporary Preset** feature automatically finds and saves the nearest 10 radio stations without changing your existing preset stations.

1. Tap the **Phone Button** three times to automatically find and save 10 stations.

Temporary Stations

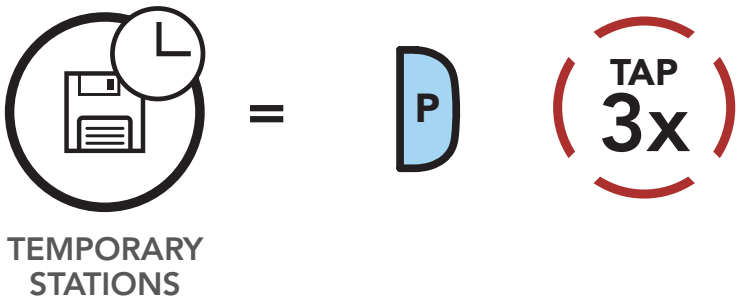

2. The temporary preset stations will be cleared when the headset reboots.


10. USING THE FM RADIO

FM Radio On/Off
Seek and Save Radio Stations
Scan and Save Radio Stations
Temporary Station Preset
Navigating Preset Stations
Region Selection
Radio Data System (RDS) Alternative Frequency (AF) Setting
FM Station Guide

10.5 Navigating Preset Stations

Using the methods above, up to 10 radio stations can be stored. Tap the **Phone Button** to navigate through the saved stations.

Navigate through Preset Stations

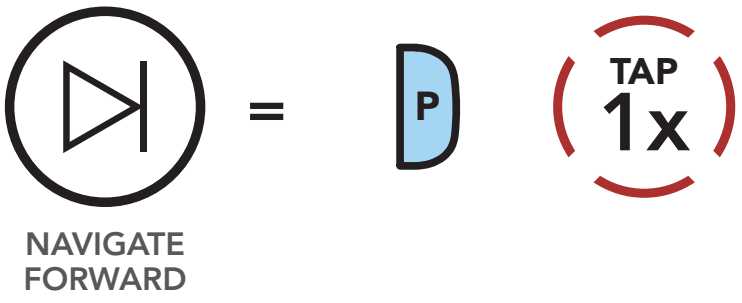

Note: You can use the **Sena Device Manager** or the **Sena 30K Utility App** to save the preset stations.

10.6 Region Selection

You can select the proper FM frequency range for your location from the **Sena Device Manager** or the **Sena 30K Utility App**. Using the region setting, you can optimize the seek function to avoid unnecessary frequency ranges.

Region	Frequency range	Step
Worldwide	76.0 ~ 108.0 MHz	± 100 kHz
North America, South America and Australia	87.5 ~ 107.9 MHz	± 200 kHz
Asia and Europe	87.5 ~ 108.0 MHz	± 100 kHz
Japan	76.0 ~ 95.0 MHz	± 100 kHz

10. USING THE FM RADIO

FM Radio On/Off

Seek and Save Radio Stations

Scan and Save Radio Stations

Temporary Station Preset

Navigating Preset Stations

Region Selection

Radio Data System (RDS) Alternative Frequency (AF) Setting

FM Station Guide

10.7 Radio Data System (RDS) Alternative Frequency (AF) Setting (Default: Disable)

The **RDS AF** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.

When radio station signals get too weak for a good reception, with **RDS AF** enabled, the Sena radio receiver re-tunes to a station with better reception. If **RDS AF** is disabled, you'll have to find stronger stations manually.

10.8 FM Station Guide (Default: Enable)


The **Station Guide** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.

When **FM Station Guide** is enabled, FM station frequencies are given by voice prompts as you select preset stations. When **FM Station Guide** is disabled, the voice prompts on FM station frequencies will not be given as you select preset stations.

11. AMBIENT MODE

You can hear the ambient sound outside of your helmet by activating the **Ambient Mode**. To activate the **Ambient Mode**, press the **Ambient Mode Button** twice which is placed on the bottom of the clamp unit. To deactivate the **Ambient Mode**, press the **Ambient Mode Button** twice again.

Ambient Mode

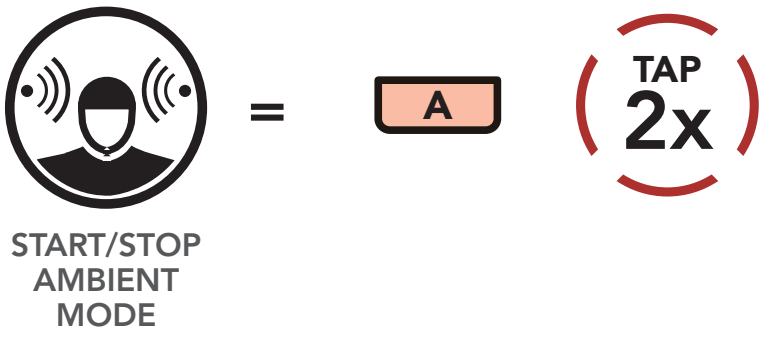


Note: The **Ambient Mode** has higher priority than mobile phone, so you cannot listen to music, or have an intercom conversation if the **Ambient Mode** is activated.

12. VOICE COMMAND

Voice Command Setting

The voice command of the headset allows you to operate certain operations by simply using your voice. You can control the headset completely handsfree using the voice recognition. The voice command function works only with English commands.

Voice Command

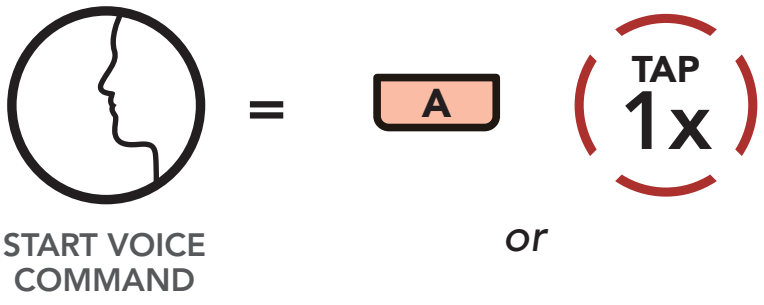

Speak a voice command from the table below:

Mode Status	Function	Voice Command
Standby / Intercom	Start/End each Intercom	"Intercom [one, two, three]"
	End all intercoms	"End intercom"
	Call last intercom	"Last intercom"
	Group intercom	"Group intercom"
	Intercom pairing	"Pairing intercom"
	Cancelling operations	"Cancel"

12. VOICE COMMAND

Voice Command Setting

Mode Status	Function	Voice Command
Standby / Music / FM Radio	Play/Pause music	“Music” or “Stereo”
	Turn on/off FM radio	“FM radio”
	Check battery	“Check battery”
	Speed dialing	“Speed dial [one, two, three]”
	Redial the last call	“Redial”
	Check connected devices	“Connected devices”
	Configuration menus	“Configuration”
Music / FM Radio	Next track (music) / next preset (FM radio)	“Next”
	Previous track (music) / previous preset (FM radio)	“Previous”
	Stop music / FM radio	“Stop”
Standby / Mesh Intercom	Mesh intercom On/Off	“Mesh intercom”
	End the Bluetooth and Mesh intercom	“End intercom”

12. VOICE COMMAND

Voice Command Setting

Note:

- Voice command performance may vary based on the environmental conditions including riding speed, helmet type and ambient noise. To improve the performance, minimize wind noise on the microphone by using a large microphone sponge and closing the visor.
- To activate the voice command during intercom conversation, tap the **Ambient Mode Button** once.

12.1 Voice Command Setting (Default: Enable)

A **Voice Command** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.

When **Voice Command** is enabled, you can use your voice to give a command the headset operate certain operations completely handsfree. If **Voice Command** is disabled, you will need to operate all of the functions using the buttons on the headset.

13. GENERAL SETTINGS

Function Priority
Firmware Upgrades
Voice Prompts
Sidetone
Delete All Bluetooth Pairing Information

13.1 Function Priority

The headset prioritizes connected devices in the following order:

(highest)	Ambient Mode
	Mobile phone
	Voice command mode
	Mesh Intercom / Bluetooth Intercom
	Music sharing via Bluetooth stereo
	FM radio
	Stereo music by audio cable
(lowest)	Bluetooth stereo music

A lower-priority function gets interrupted by a higher-priority function. For example, stereo music will be interrupted by an **Intercom Conversation**; an **Intercom Conversation** will be interrupted by an incoming mobile phone call.

13.2 Firmware Upgrades

The headset supports firmware upgrades. You can upgrade the firmware using the **Sena Device Manager**. Please visit **sena.com** to check for the latest software downloads.

Click Here to Visit sena.com

13. GENERAL SETTINGS

Function Priority

Firmware Upgrades

Voice Prompts

Sidetone

Delete All Bluetooth Pairing Information

13.3 Voice Prompts (Default: Enable)

A **Voice prompt** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.

If **Voice prompt** is enabled, you can hear **Voice prompts** for different kinds of features. If **Voice prompt** is disabled, **Voice prompts** are silenced except for those in the Configuration Menu, battery level indication, speed dial, and FM radio functions.

13.4 Sidetone (Default: Disable)

A **Sidetone** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.

Sidetone is the sound of your own voice as picked up by your headset's microphone and reproduced in your own ear, by your own speaker. It helps you to naturally speak at the correct level according to varying helmet noise conditions. If this feature is enabled, you can hear what you are speaking during an intercom conversation or a phone call.

13. GENERAL SETTINGS

Function Priority

Firmware Upgrades

Voice Prompts

Sidetone


Delete All Bluetooth Pairing Information


13.5 Delete All Bluetooth Pairing Information

A **Delete All Bluetooth Pairing Information** setting can be found in the **Headset Configuration Menu**.

Tap the **Phone Button** when in this menu to **Delete All Bluetooth Pairing Information** stored in the headset.

Access Delete All Pairings in the Configuration Menu

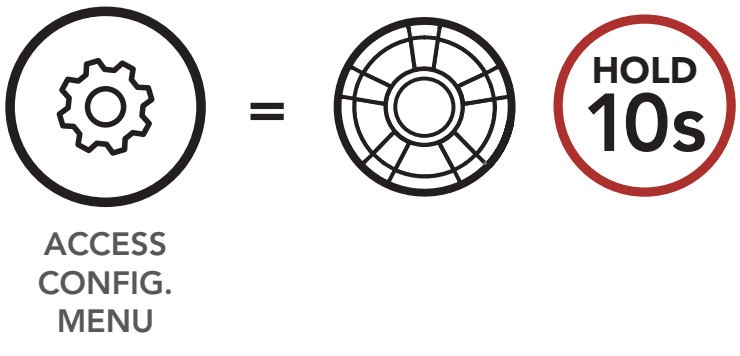

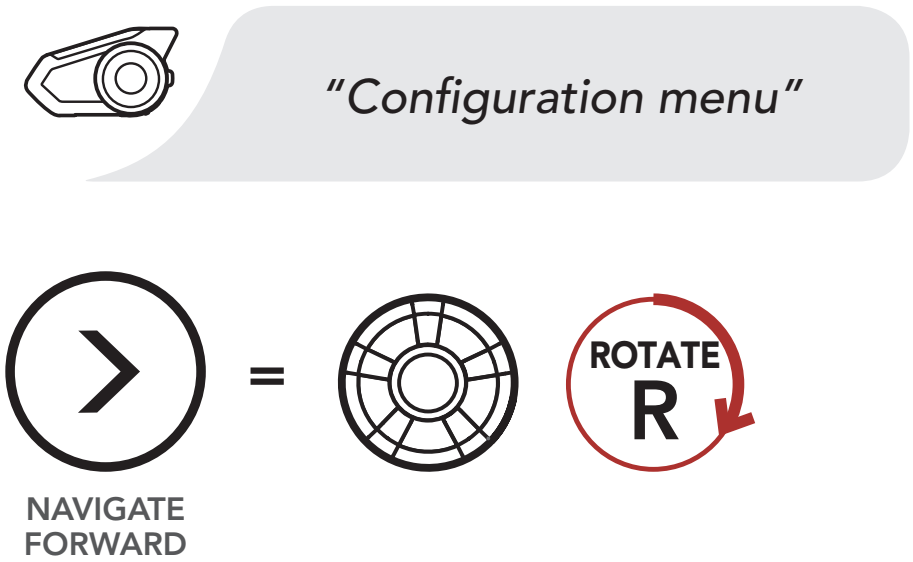

14. REMOTE CONTROL


Pairing with the Remote Control


You can remotely control the headset using Sena Remote Control devices (sold separately) such as a Handlebar Remote or a Wristband Remote. This eliminates the need to remove your hands from the handlebars for button operations.

14.1 Pairing with the Remote Control

1. Turn on the headset and the Remote Control device.
2. Execute **Remote Control Pairing** in the **Headset Configuration Menu**.

Access Remote Control Pairing in the Configuration Menu

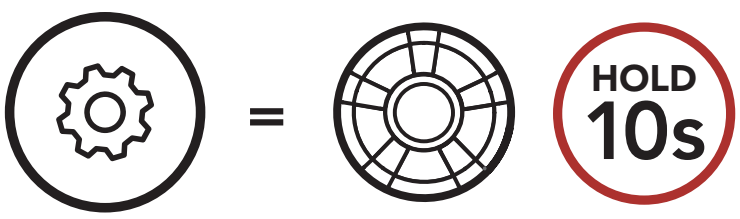

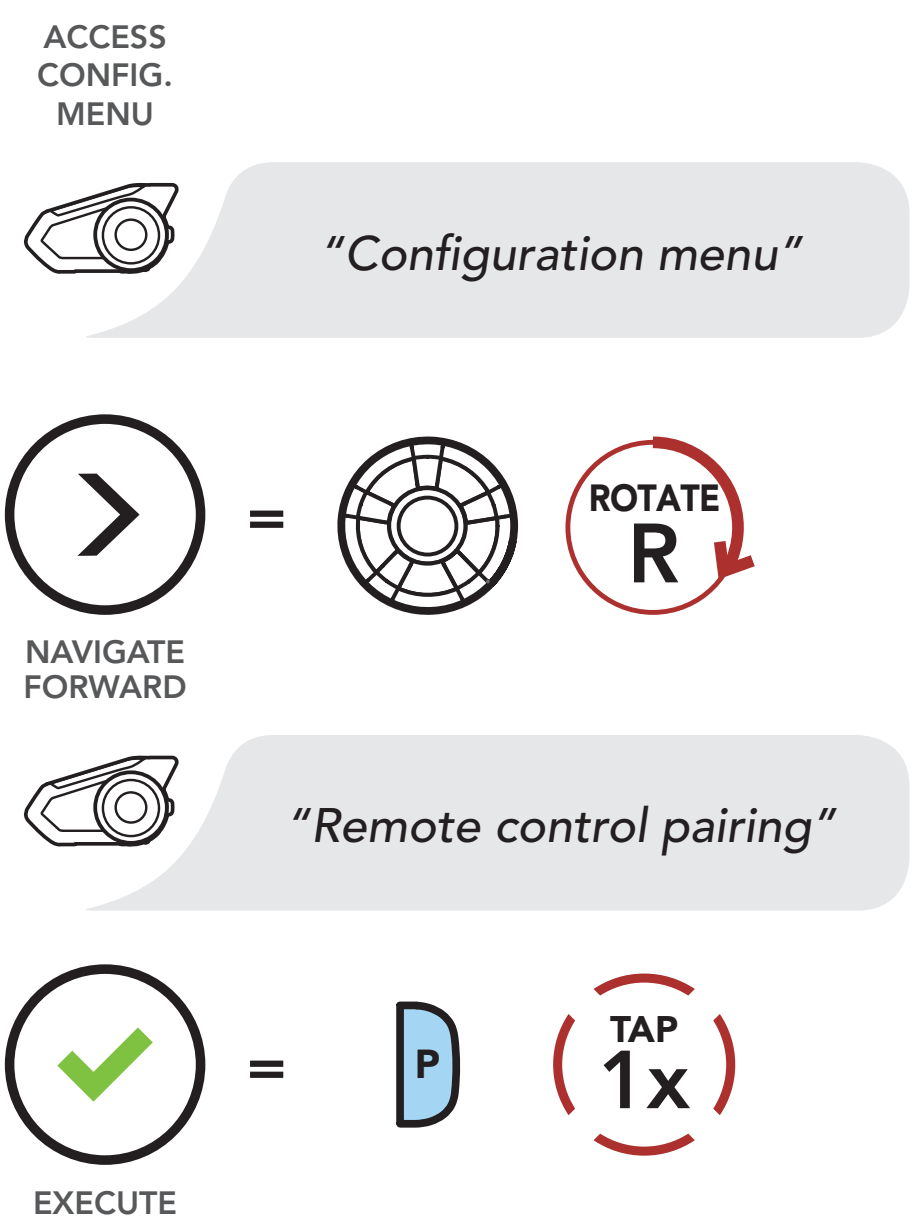

MENU

14. REMOTE CONTROL

Pairing with the Remote Control


3. Enter pairing mode in the Remote Control device. The headset will automatically connect with the Remote Control device in pairing mode. You will hear a voice prompt, **"Remote control connected"**, when they are successfully paired.

Enter Pairing Mode



REMOTE CONTROL

= Enter Pairing Mode on Remote Control.



"Remote control connected"

15. TROUBLESHOOTING

Fault Reset

Factory Reset


Please visit **sena.com** for answers to frequently asked questions. This detailed online FAQ section deals with troubleshooting, illustrates case studies and contains tips on using the headset.

Click Here to Visit sena.com

15.1 Fault Reset

When the headset is not working properly, you can easily reset the unit:

1. Locate the pinhole reset button below on the back of the main unit.
2. Gently insert a paperclip into the hole and tap the **Fault Reset Button** with light pressure.

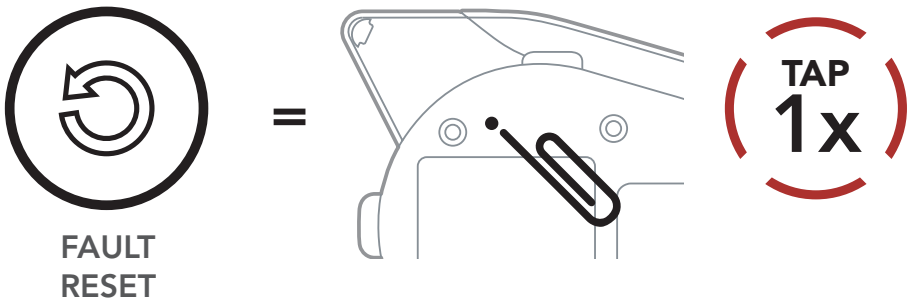

3. The headset will shut down.

Note: Fault Reset will not restore the headset to factory default settings.


15. TROUBLESHOOTING


15.2 Factory Reset

Fault Reset

Factory Reset

To erase all of your settings and start fresh, the headset can be restored to factory default settings using the **Factory Reset** feature.

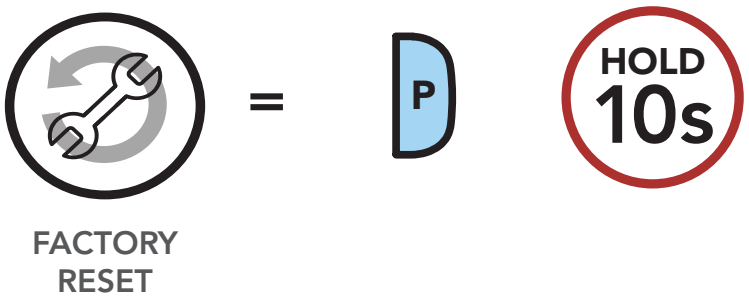

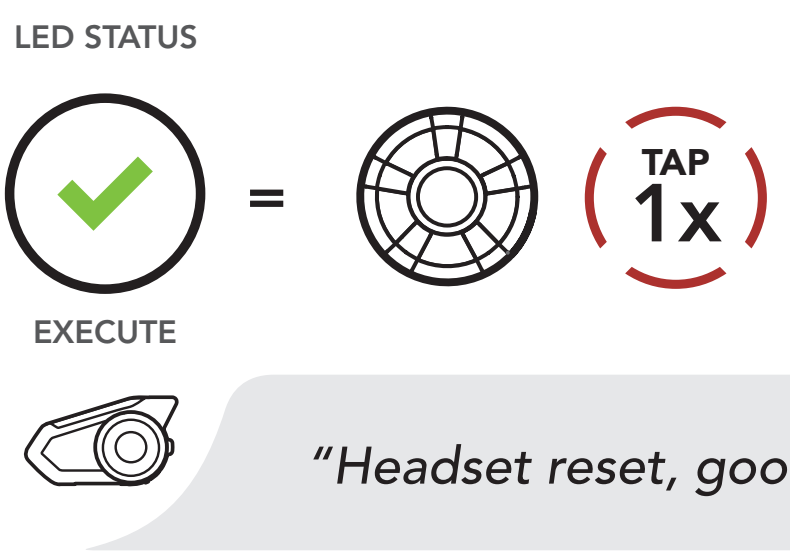

Note: If you press the **Phone Button** or don't press the **Jog Dial** within **5 seconds**, the reset attempt is canceled and the headset returns to standby mode. You will hear a voice prompt saying **"Canceled"**.

SENA

Copyright © 2021 Sena Technologies, Inc.
All rights reserved.

© 1998–2021 Sena Technologies, Inc. All rights reserved.

Sena Technologies, Inc. reserves the right to make any changes and improvements to its product without providing prior notice.

Sena™ is a trademark of Sena Technologies, Inc. or its subsidiaries in the USA and other countries. SF1™, SF2™, SF4™, SFR™, SRL™, Momentum™, Momentum INC™, Momentum Lite™, Momentum Pro™, Momentum INC Pro™, Momentum EVO™, Cavalry™, Latitude SR™, Latitude SX™, Latitude S1™, 30K™, 33i™, 50S™, 50R™, 50C™, 5S™, 20S EVO™, 20S™, 10S™, 10C™, 10C PRO™, ProRide EVO™, 10C EVO™, 10U™, 10Upad™, 10R™, 3S™, 3S PLUS™, SMH5™, SMH5-FM™, SMH5 MultiCom™, SMH10™, SMH10R™, SPH10™, SPH10H-FM™, Savage™, Prism Tube WiFi™, Prism™, Bluetooth Audio Pack for GoPro®, Impulse™, R1™, R1 EVO™, R1 EVO CS™, R2™, R2 EVO™, R2X™, M1™, M1 EVO™, RUMBA™, RC1™, RC3™, RC4™, Handlebar Remote™, Wristband Remote™, PowerPro Mount™, Powerbank™, FreeWire™, WiFi Docking Station™, WiFi Sync Cable™, WiFi Adapter™,+mesh™, +Mesh Universal™, MeshPort Blue™, MeshPort Red™, MeshPort Black™, Econo™, OUTRUSH™, OUTRUSH R™, OUTSTAR™, OUTSTAR S™, EcoCom™, Parani A10™, Parani A20™, Parani M10™, pi™, Snowtalk™, Snowtalk2™, SR10™, SR10i™, SM10™, SPIDER RT1™, SPIDER ST1™, X1™, X1 Pro™, X1S™, Expand™, Expand Boom™, Bluetooth Mic & Intercom™, Tufftalk™, Tufftalk Lite™, Tufftalk M™ are trademarks of Sena Technologies, Inc. or its subsidiaries. These trademarks may not be used without the express permission of Sena.

GoPro® is a registered trademark of Woodman Labs of San Mateo, California. Sena Technologies, Inc. (“Sena”) is not affiliated with Woodman Labs, Inc. The Sena Bluetooth Pack for GoPro® is an aftermarket accessory specially designed and manufactured by Sena Technologies, Inc. for the GoPro® Hero3 and Hero4 allowing for Bluetooth capabilities.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sena is under license. iPhone® and iPod® touch are registered trademarks of Apple Inc.

Address: 152 Technology Drive Irvine, CA 92618